

KODAK PRINTOMATIC+

DIGITAL INSTANT PRINT CAMERA



User Manual

3"H | 4.7"W | 0.9"D (7.8 cm | 2.4 cm | 12 cm)

Please read all directions before using the product and retain this guide for reference.

CONTENTS

1	INTRODUCTION	3
2	PARTS AND FUNCTIONS	3
3	USING YOUR CAMERA	4-7
4	PHOTO TIPS	8
5	LED SCENARIOS	9
6	WARNINGS AND SAFETY PRECAUTIONS	10
7	BATTERY CARE AND CHARGING	10
8	FAQS	11-12
9	CUSTOMER SERVICE	12
10	LIMITED WARRANTY TO ORIGINAL CONSUMER	13-14
11	IMPORTANT SAFETY NOTICE	14-16

 
1. INTRODUCTION

Thank you for purchasing the KODAK PRINTOMATIC+ Digital Instant Print Camera. This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user. Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

This product is intended for household use only. This product is covered by a limited warranty and is subject to conditions and exclusions. See warranty for details.

2. PARTS AND FUNCTIONS


1. Camera Lens
2. Flash
3. Viewfinder
4. Photo Printing Slot
5. Reset Button
6. Charging Light Indicator
7. USB-C Port
8. Speaker
9. MicroSD™ Card Slot
10. Shutter Button
11. Power Button
12. LED Indicator Light
13. Strap Slot (strap not included)
14. Paper Compartment Door

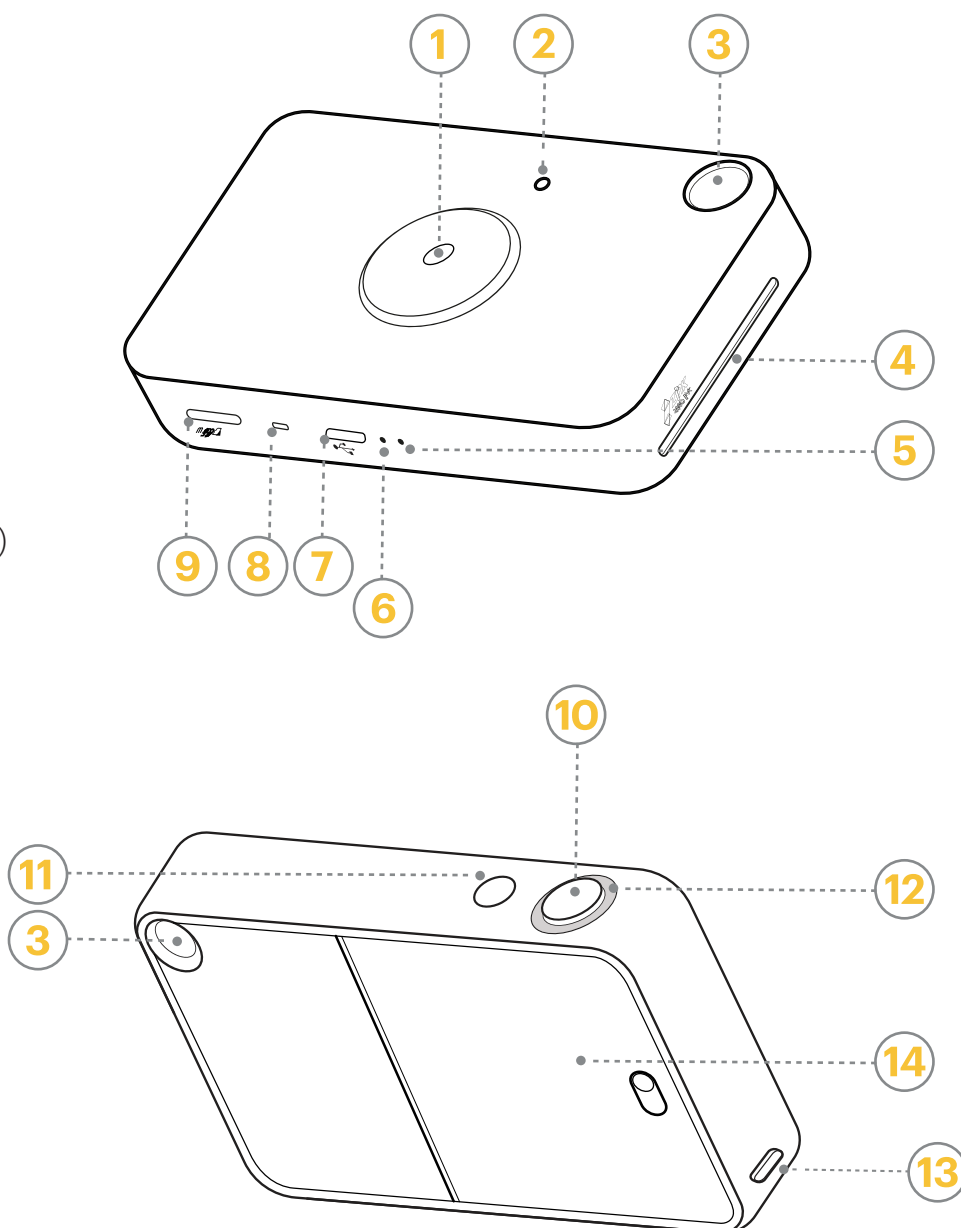

3. USING YOUR CAMERA


Getting Ready for Use

 Charge it first: Before you start using your new Kodak Printomatic+ camera, plug it in to charge using the included USB-C cable. Wait for the charging light indicator to turn solid green, indicating a successful charge.

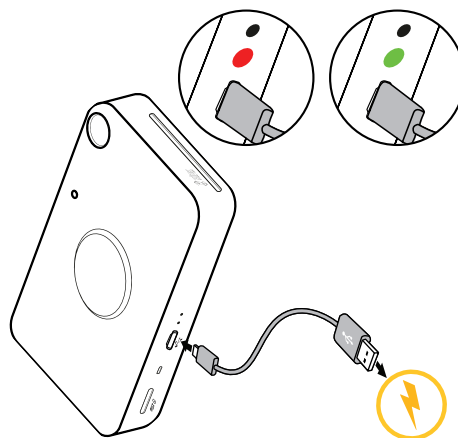


Load your ZINK paper into the camera: Follow the steps below to get your new camera loaded with ZINK sticky-backed photo paper:

 
1. Press down on the latch and pop the paper compartment door open.

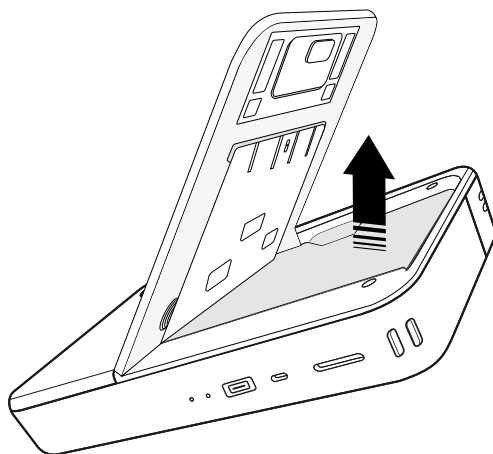

 
2. Load the blue calibration sheet with the barcode facing down. Form a neatly aligned stack with the remaining photo sheets and place them on top, with the glossy side facing you. Try to avoid touching the glossy side so you don't get fingerprints on it.
3. Insert ZINK paper stack into paper compartment.

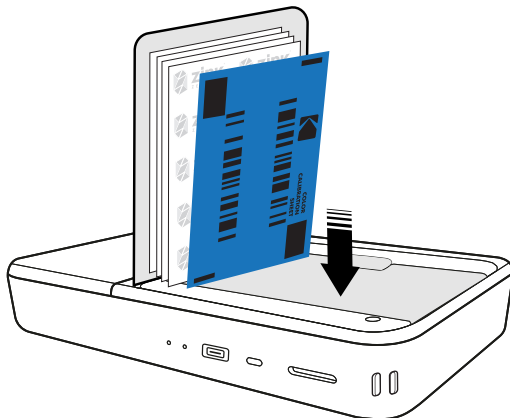

 4. Click the camera door shut.

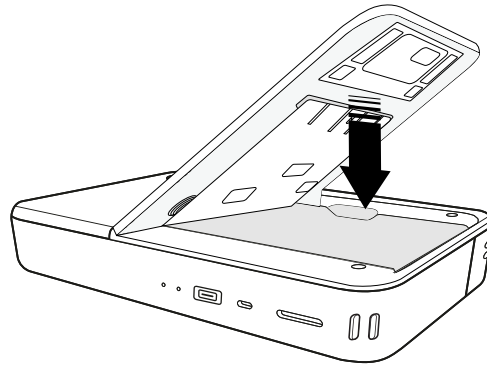


 5. When you turn your camera on, the blue calibration sheet will take a few seconds to process, then slowly eject from the printing slot and the LED Indicator Light will slowly blink blue.

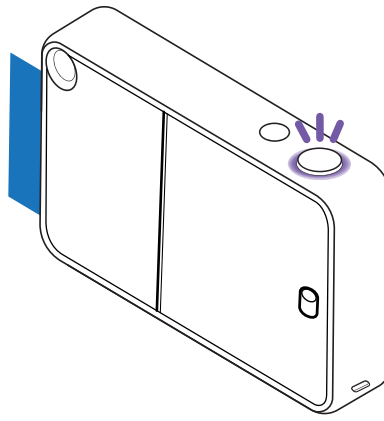

6. Only load a single pack of 10 papers and the corresponding blue calibration sheet at once. The calibration sheet will be processed automatically at the start of each paper pack, calibrating the camera for that specific pack.

 - The camera is designed to capture and print immediately and can hold up to 3 images at a time. To save your pictures, use an external microSD™ card to extend its memory capacity.
- The Printomatic+ can perform without a microSD™ card, but using one is highly recommended.
NOTE: Photos can also be uploaded using the included USB-C cable.
- Insert a microSD™ card into the corresponding slot on the bottom of the camera.

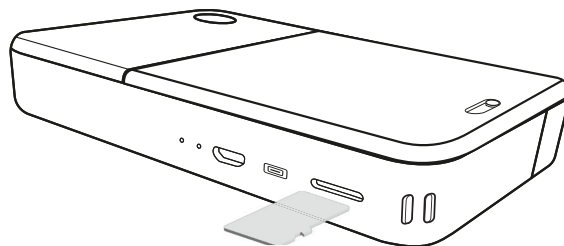


- To remove, press the card gently with your fingernail, and it should pop out. The Printomatic+ supports microSD™ cards up to 256GB.
- When the memory on your microSD™ card reaches zero, or there is an error reading the card, the LED Indicator Light will blink red six times.

Zink Photo Paper Dos & Don'ts

- Do not add more paper until the paper compartment is completely empty.
- Do not fill the paper compartment with more than one 10-pack of KODAK ZINK Photo Paper. Filling over 10 sheets can damage the printer.
- Do not bend the KODAK ZINK Photo Paper.
- Hold the paper by its edges. Avoid touching the surface with your fingers.
- If ZINK photo paper is over-exposed to humidity, it may begin to bend, causing printing issues such as paper jams. To avoid this:
 - When not in use, store your ZINK photo paper in a cool, dry place and avoid exposure to direct sunlight and heat.
 - The ideal temperature at which to store Kodak ZINK photo paper is between 32°F and 77°F (0°C and 25°C) and 40% to 60% relative humidity.
- If you inserted the wrong type of paper or there is a paper jam, the LED Indicator Light will blink red. Open your camera and correct the error (clear jam, replace paper, etc.) and then restart your camera by pressing the power button once.

Turning On

 Press and hold the power button on top of the camera for at least two seconds. Make sure your camera battery is fully charged. The LED Indicator Light will blink white while powering on and stay green once the camera is ready to use. Then it will blink blue as the calibration sheet is ejected.

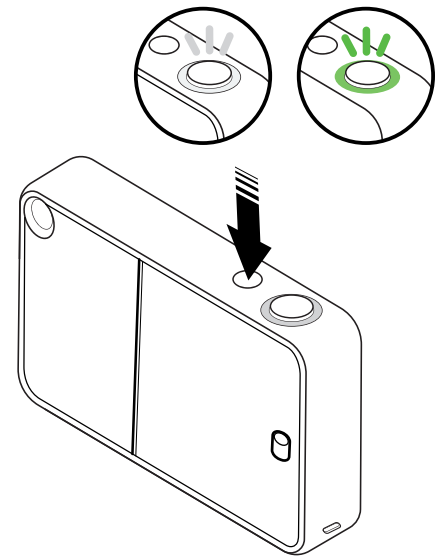


Turning Off

Press and hold the power button to turn the camera off.

Taking Photos


- To take a photo, press the shutter button on the top right of the camera until a shutter sound is heard. The LED Indicator Light will slowly blink white/green while processing and blink colorful rainbow while printing.

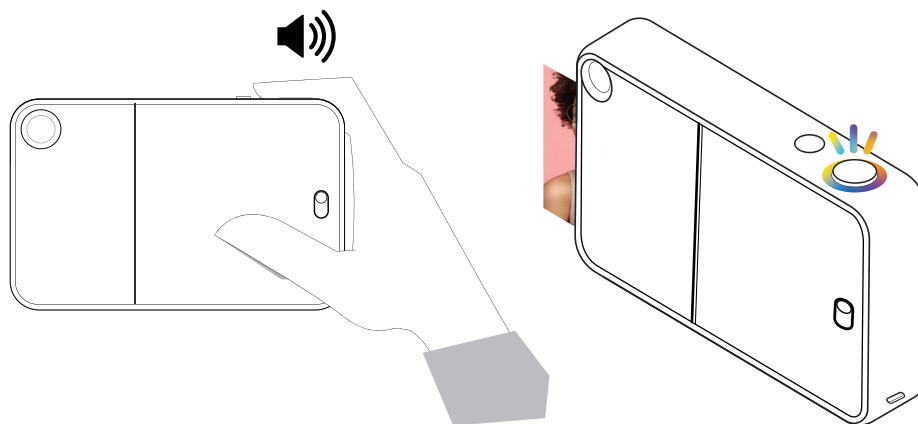 

- Your camera will automatically focus and activate the flash depending on the lighting conditions for each photo.
- After several prints, your camera may need to cool down before printing again. The LED Indicator Light will blink blue/white while it cools.

Printing Photos

 - Your Printomatic+ will automatically begin printing after a photo is taken.
- While the photo is processing, the LED Indicator Light will slowly blink green/white until the engine starts. Photos cannot be taken while the camera is processing.
- If you print multiple consecutive photos, the LED Indicator Light will blink rapidly blue/white to indicate that the device needs time to cool down. Once the engine starts, the printer has finished cooling down and you may resume use. Photos cannot be taken while the camera is cooling down.

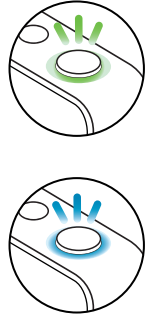

What Paper Do I Need to Buy for my Kodak Printomatic+?

Make sure to buy Kodak 2x3" ZINK photo paper for your Kodak Printomatic+. This paper is specially designed to work with your Kodak Printomatic+ camera. Only use Kodak 2x3" ZINK photo paper with the Kodak Printomatic+. The Kodak 2x3" ZINK photo paper comes with a blue calibration SMARTSHEET® with a barcode for color calibration.



Transferring Files to Your Computer

- Via USB-C Cable: Using the included USB-C cable, connect your Kodak Printomatic+ to a computer. Double-click the memory card image when it appears on your computer desktop to view and save your images.
- Via microSD™ Card: Remove the microSD™ card as indicated above and insert the card into your card reader.

4. PHOTO TIPS

1. The blue sheet cleans and calibrates your printer for that specific paper pack. It will be automatically ejected after loading.
2. To reset the camera, use a pin to press and hold the reset button for 2 seconds.
3. When using an SD card, photos can only be saved to the SD card. You cannot print photos from the SD card.
4. The flash will automatically turn on when the camera senses the environment is dark.
5. Make sure not to cover the printing slot with your hand when a photo is printing.
6. For best results, position the camera at least 6 feet from your subject.
7. The camera will not take photos if a photo is processing or there are more than three photos in the printing queue.
8. If your photo paper doesn't feed or the device fails to print, remove the paper, form it into a neatly aligned stack, reload it, and restart the device by pressing the power button once.
9. If your print has visible streaks, try running the blue calibration sheet again to clean the printer.
10. Remove dust, debris, and dirt from the device using a dry microfiber cloth.
11. Keep the cover on the camera on while not in use to prevent dust and debris from entering the paper path slot.

Improving Print Quality

If the quality of your printed photo is not as expected, try the following:

- **Run a Calibration Sheet** Run a blue calibration sheet through the printer.
- **Check the Photo Paper** Open the paper door and remove your Kodak Zink Photo Paper. Carefully wipe any dirty papers with a microfiber cloth and remove papers that are wrinkled, bent, or torn. Form the paper into a neatly aligned stack with the blue calibration sheet on bottom, barcode facing down, and reload.
- **Lighting** Make sure there is sufficient lighting when taking photos.

Printing Errors

- **Paper Jams** Wait for the device to clear the paper jam itself. If it doesn't go away, gently tug on the paper and restart the device to allow proper ejection. Avoid pulling out jammed paper forcefully, as it may damage the printer head.
- **Paper Feeding Failure** Remove your Zink photo paper and check the quality. If the paper is very curled, try loading less paper at a time. When reloading paper, form a neatly aligned stack with the blue calibration sheet on bottom, barcode facing down.
- **Cooling Down** When printing multiple consecutive photos, the LED indicator light will blink blue and white. Allow the device to cool down, and printing will automatically resume.

NOTE: To save your print when an error occurs, simply press the power button. Your photo will automatically print when the camera is turned back on.

5. LED SCENARIOS

LED Indicator Status

Scenario	Color
Camera ready	Solid green
No paper & SD card missing No paper detected	Flashing green & red
Ambient temperature too high	Flashing red
Ambient temperature too low	Flashing blue
Photo processing	Slow blinking green and white
Printing in progress	Flashing colorful rainbow
Photo Capture Error Captured photo with no SD card and/or paper inserted Captured photo while processing Captured photo in USB storage mode Captured photo during calibration	Rapidly blinking yellow 6 times
Smartsheet calibration	Slow blinking blue
Smartsheet mismatch	Solid red
Paper misfeed	Blinking red with white intervals Note: Remove and reload paper to try again. To reprint your image, tap the power button once.
Paper Jam	Blinking red Note: Remove & reload paper, and restart device to try again
SD card processing	Blinking purple & white
Printer cooling	Flashing blue & white
USB storage mode (connected to PC)	Blinking purple/white
SD card full or not supported	Blinking red & off
Firmware updating	Flashing yellow/off/white/off
Firmware success	Flashing green 6 times
Firmware failure	Solid red Note: Restart device and try again
Low battery (<10%)	Blinking green with red intervals
Battery too low	Flashing green/red 3 times then power down
Battery charging (0-89%)	Solid red
Battery fully charged (90-100%)	Solid green
Not charging (abnormal condition): Temperature too high/low	Blinking red

6. WARNINGS AND SAFETY PRECAUTIONS

Warning:

- This camera is not waterproof or water-resistant. Exercise caution when using near water.
- Do not use the camera while you are walking, driving, or riding a motorcycle as these actions may result in accidents.
- Do not point the flash close to anyone's eyes. This may cause harm to the person's eyesight.
- Turn the power off if:
 - Foreign objects or water enter the camera.
 - The camera has been dropped or damaged.Continued use after the foregoing issues may cause personal injury. Service should only be performed by a qualified technician.
- Use the camera in a well-ventilated area. Do not wrap the camera or place it in cloth or blankets. This may cause heat to build up and deform the housing, resulting in personal injury.
- Do not let sand or other particles get inside the camera, as damage may occur.
- Do not leave the camera in places where the temperature may rise significantly, such as inside a car or under direct sunlight. This may affect the performance of the product.
- This camera is a precision instrument. Do not drop, strike, or use excessive force when handling the camera.
- Before moving the camera, disconnect all cords and cables. Failure to do so may damage cords and cables, resulting in personal injury or damage to the product.
- For optimal performance, use your KODAK PRINTOMATIC+ in temperatures between 60°F and 90°F (15.6°C and 32.2°C) and between 20% to 80% relative humidity.
- During extended use, your camera may feel warm to the touch. This is a normal operating occurrence and does not indicate any product defect or reason to slow down the fun.

7. BATTERY CARE AND CHARGING

Please carefully read and follow these guidelines.

- Your KODAK PRINTOMATIC+ camera is equipped with a built-in, non-removable 7.4V lithium-ion battery.
- To charge your camera, plug it into a wall outlet using a USB-C cable and wall adapter. The charging LED indicator will turn red and then green as the battery charges.
- Your KODAK PRINTOMATIC+ may take up to 1.5 hours to fully charge.
- Avoid extremely cold environments as low temperatures can shorten the battery life and reduce camera performance. Batteries should not be exposed to excessive heat, such as sunshine, fire, or the like.
- Do not disassemble the camera or remove the battery at any time. The battery is not designed to be removed from the camera or charged outside the camera. There is a danger of an explosion if the battery is incorrectly replaced and should be replaced only with the same or equivalent type. Please contact our support team for service.
- When the battery power becomes critically low, the device LED Indicator Light will blink red/green and the camera will not print. If the battery drains completely, the device will automatically shut down, playing a final sound before powering off.
- Please be sure to dispose of the camera device and battery at a properly designated recycling center in your jurisdiction. Lithium-ion batteries may cause environmental harm if disposed of incorrectly.

8. FAQs

Q: Why are the colors on my prints coming out wrong?

A: To ensure color accuracy, your camera's printer must be properly calibrated by the Blue Calibration Sheet inserted with the barcode facing down. This sheet has a unique barcode specific to each paper stack, so make sure not to mix paper from different packs together.

Q: Why do I need to load the calibration sheets?

A: The blue calibration sheets were created by Zink to clean the paper path rollers of the device and provide the best print quality. The sheet has two main functions:

1. Calibrates the printer in order to provide the best print quality for your specific Kodak Photo Paper.
2. Cleans the paper path rollers to get rid of any dust or debris during calibration, or when you need to improve printing quality.
 - Be sure to load each paper pack with its included calibration sheet to ensure the best print quality.

Whenever a new pack is loaded, the blue sheet will be ejected first, and then printing will resume.

Q: How do I charge my camera?

A: To charge the battery in your camera, you will have to plug the USB-C cable into a wall adapter (not included). Using a computer or laptop to charge the camera is not recommended because it will significantly increase the charging time.

Q: What do I do if the paper is stuck?

A: Turn the printer off and on again to automatically eject the paper. Do not try to pull out the paper by hand.

Q: Why are my prints coming out blank?

A: The Kodak Zink photo paper may have been loaded upside down. When loading the paper, ensure that the blue calibration sheet is at the bottom with the barcode facing down, and the rest of the paper is facing with the glossy side up.

OR

The paper may have been pushed too deeply inside the device. Remove the paper and reload it gently inside the compartment.

Q: How many sheets can I put in at once?

A: You can load one 10-pack of KODAK ZINK Photo Paper at one time.

Q: Why are my pictures not centered?

A: The frame marks on the viewfinder are set to focus a target 6 feet away. If you are taking pictures less than 6 feet from your target, the frame marks may not line up with the photo.

Q: Why are my pictures coming out with lines?

A: Make sure that your paper is properly inserted and that nothing is obstructing the exit slot where the pictures are dispensed. Also use the Blue Calibration Sheet with every paper pack to clean the printheads. Do not aggressively shake your camera; it may interfere with the printing process.

Q: What memory cards can be used with my camera?

A: The KODAK PRINTOMATIC+ camera accepts microSD™ cards and flash memory cards from all brands.

Q: Is a microSD™ card required for this camera?

A: A microSD™ card is not required in order to use the camera. If you want to save your photos to your computer you will need to have a microSD™ or comparable memory card in your camera while you take your pictures.

Q: Is any type of paper compatible with this camera?

A: The KODAK PRINTOMATIC+ camera was designed to work only with KODAK ZINK Photo Paper. Other papers may be incompatible with this camera.

Q: How do I turn on the flash for my camera?

A: Your camera is equipped with a light sensor that will automatically turn on the flash in low light settings.

Q: Can you choose when to print or does the camera print automatically?

A: Your KODAK PRINTOMATIC+ camera prints automatically. Every picture taken will print after a few seconds.

Q: Does the camera's printer print pictures from other devices?

A: The KODAK PRINTOMATIC+ camera only prints the pictures you take from the camera. It does not connect to other devices.

9. CUSTOMER SERVICE

U.S.: kodak@camarketing.com, 844-516-1539

International: kodakintl@camarketing.com, +1-844-516-1540

10. LIMITED WARRANTY TO ORIGINAL CONSUMER

This Kodak Printomatic+ Digital Instant Print Camera ("Product"), including any accessories included in the original packaging, as supplied and distributed new by an authorized retailer is warranted by C&A Marketing, Inc. (the "Company") to the original consumer purchaser only, against certain defects in material and workmanship ("Warranty") as follows:

To receive Warranty service, the original consumer purchaser must contact the Company or its authorized service provider for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the Product is within the applicable Warranty period(s), MUST be presented to the Company or its authorized service provider in order to obtain the requested service.

Service options, parts availability, and response times may vary and may change at any time. In accordance with applicable law, the Company may require that you furnish additional documents and/or comply with registration requirements before receiving warranty service:

USA: kodak@camarketing.com, 844-516-1539

International: kodakintl@camarketing.com, +1-844-516-1540

Shipping expenses to the Company's Return Facility are not covered by this warranty and must be paid by the consumer. The consumer likewise bears all risk of loss or further damage to the Product until delivery to said facility.

EXCLUSIONS AND LIMITATIONS The Company warrants the Product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase by the original end-user purchaser ("Warranty Period"). If a hardware defect arises and a valid claim is received within the Warranty Period, the Company, at its sole option and to the extent permitted by law, will either (1) repair the Product defect at no charge, using new or refurbished replacement parts, (2) exchange the Product with a Product that is new which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original device, or (3) refund the purchase price of the Product.

A replacement Product or part thereof shall enjoy the warranty of the original Product for the remainder of the Warranty Period, or ninety (90) days from the date of replacement or repair, whichever provides you with longer protection. When a Product or part is exchanged, any replacement item becomes your property, while the replaced item becomes the Company's property. Refunds can only be given if the original Product is returned.

This Warranty does not apply to:

- (a) Any non-Kodak Printomatic+ Digital Instant Print Camera product, hardware, or software, even if packaged or sold with the product;
- (b) Damage caused by use with non-Kodak Printomatic+ Digital Instant Print Camera products;
- (c) Damage caused by accident, abuse, misuse, flood, fire, earthquake, or other external causes;
- (d) Damage caused by operating the Product outside the permitted or intended uses described by the Company;
- (e) Damage caused by third-party services;
- (f) A product or part that has been modified to alter functionality or capability without the written permission of the Company;
- (g) Consumable parts, such as batteries, fuses and bulbs;
- (h) Cosmetic damage; or
- (i) If any Kodak Printomatic+ Digital Instant Print Camera serial number has been removed or defaced.

This Warranty is valid only in the country where the consumer purchased the Product and only applies to Products purchased and serviced in that country.

The Company does not warrant that the operation of the Product will be uninterrupted or error-free. The Company is not responsible for damage arising from your failure to follow instructions relating to its use.

NOTWITHSTANDING ANYTHING TO THE CONTRARY AND TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, THE COMPANY PROVIDES THE PRODUCT "AS-IS" AND "AS-AVAILABLE" FOR YOUR CONVENIENCE AND THE COMPANY AND ITS LICENSORS AND SUPPLIERS EXPRESSLY DISCLAIM ALL WARRANTIES AND CONDITIONS, WHETHER EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, TITLE, QUIET ENJOYMENT, ACCURACY, AND NON-INFRINGEMENT OF THIRD-PARTY RIGHTS. THE COMPANY DOES NOT GUARANTEE ANY SPECIFIC RESULTS FROM THE USE OF THE PRODUCT, OR THAT THE COMPANY WILL CONTINUE TO OFFER OR MAKE AVAILABLE THE PRODUCT FOR ANY PARTICULAR LENGTH OF TIME. THE COMPANY FURTHER DISCLAIMS ALL WARRANTIES AFTER THE EXPRESS WARRANTY PERIOD STATED ABOVE.

YOU USE THE PRODUCT AT YOUR OWN DISCRETION AND RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND THE COMPANY DISCLAIMS) ANY AND ALL LOSS, LIABILITY, OR DAMAGES RESULTING FROM YOUR USE OF THE PRODUCT.

NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY YOU FROM THE COMPANY OR THROUGH ITS AUTHORIZED SERVICE PROVIDERS SHALL CREATE ANY WARRANTY.

IN NO EVENT WILL THE COMPANY'S TOTAL CUMULATIVE LIABILITY ARISING FROM OR RELATED TO THE PRODUCT, WHETHER IN CONTRACT OR TORT OR OTHERWISE EXCEED THE FEES ACTUALLY PAID BY YOU TO THE COMPANY OR ANY OF ITS AUTHORIZED RESELLERS FOR THE PRODUCT AT ISSUE IN THE LAST YEAR FROM YOUR PURCHASE. THIS LIMITATION IS CUMULATIVE AND WILL NOT BE INCREASED BY THE EXISTENCE OF MORE THAN ONE INCIDENT OR CLAIM. THE COMPANY DISCLAIMS ALL LIABILITY OF ANY KIND OF ITS LICENSORS AND SUPPLIERS. IN NO EVENT WILL THE COMPANY OR ITS LICENSORS, MANUFACTURERS, AND SUPPLIERS BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA, OR RECORDS) CAUSED BY THE USE, MISUSE, OR INABILITY TO USE THE PRODUCT.

Nothing in these terms shall attempt to exclude liability that cannot be excluded under applicable law. Some countries, states, or provinces do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on warranties, so certain limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may have other rights that vary from state to state or province to province. Contact your authorized retailer to determine if another warranty applies.

11. IMPORTANT SAFETY NOTICE

This product has been designed to ensure the safety of the user when handled correctly and in accordance with the user guide and instructions provided.

It is important that the Kodak camera and Zink paper are handled properly and only used to print photos as instructed in the user guide.

For future reference, keep the user guide in a safe place.

WARNING

If any of the following instances occur, unplug the USB-C cable, turn the camera off, and cease use:



- Camera emits smoke, burnt smell, or functions abnormally.
- Camera is dropped in water or any foreign object enters the camera.
- The camera has a built-in battery. Do not subject it to heat, expose it to an open flame, drop it, or otherwise apply impact to it. Doing so may cause the camera to explode, resulting in injury.
- Keep away from children and infants. Improper use of this product may cause suffocation or accident.
- Stop using the device immediately if it emits smoke or a strange smell or otherwise behaves abnormally.
- Do not look at the sun or bright lights through the viewfinder or the lens. Blindness or vision problems could result.
- Do not fire the flash near the eyes. It may hurt the eyes.
- Turn the device off in places where camera use is prohibited. The electromagnetic waves emitted by the camera may interfere with the operation of electronic instruments and other devices. Exercise adequate caution when using the product in places where use of electronic devices is restricted, such as inside airplanes and medical facilities.

WARNING

- Never attempt to take this product apart. You may be injured.
- If this product is dropped or damaged so that the inside is showing, do not touch it. Contact Kodak customer support at 844-516-1539 or send us an email at kodak@camarketing.com.
- Never get this product wet or handle it with wet hands. Doing so may result in electric shock and injury. Promptly unplug the USB cable once the battery is fully charged.
- Keep out of reach of small children. This product could cause injury in the hands of a child.

- Do not cover or wrap the camera or USB-C cable in a cloth or blanket or otherwise place the camera in the sun or an environment where heat may build up. This could distort the casing and cause a fire.
- When operating in extreme weather, the device might not print. Let the camera temperature adjust to the recommended operating temperature of 59° to 90°F (15°C to 32°C), before attempting to print again.
- When charging, please charge the device at the recommended temperature of 59° to 90°F (15°C to 32°C).
- Use a soft dry cloth to clean the device. Do not clean with a damp cloth or volatile liquids such as paint thinner.
- Keep the top cover closed to avoid dust and other particles from entering the inside of the device.
- If the device is not functioning properly, please contact the dealer you purchased the product from or Kodak customer support.
- Never expose the battery to high temperatures, direct heat, or dispose by incineration.
- Electromagnetic interference or electrostatic discharge may cause the device to malfunction or the memory to be altered. Should this occur, use a pin or similar item to press the [RESET] button at the bottom of the device.

Camera Care

- Your camera is a precision instrument. Do not get it wet or drop it. Also, do not expose it to sand, dust, or dirt.
- Do not use cleaning products or solvents such as those with bleach or alcohol to remove dirt.
- In hot weather, do not leave your camera in hot places such as in a car or on the beach. Do not leave it in damp places or places where weather exposure could result.
- Take great care to ensure that your prints do not violate copyright, image rights, privacy, or other personal rights and do not offend public decency. Actions that violate the rights of others, are contrary to public decency, or constitute a nuisance, may be punishable by law or otherwise legally actionable.
- This camera is designed for household use. It is not suitable for commercial printing which requires a large amount of printing.

Battery

The battery is not charged at shipment. Charge the battery completely before use. Charge the battery using the supplied USB-C cable. Charging times will increase at ambient temperatures below 10°C (50°F) or above 35°C (104°F); at temperatures below 5°C (41°F), the battery will not charge.

At normal temperatures, the battery can be recharged about 300 times. A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life.

Caution: The battery and camera body may become warm to the touch after extended use.

Battery Warning / Avertissement de batterie

Do not disassemble, crush, or puncture battery. Do not expose to high temperatures. Dispose of properly according to local regulations. Do not short-circuit battery terminals.

Traceability in Europe

UK: Global E-Commerce Experts

Unit 5 Mountpark, Wide Lane, Southampton SO18 2FA UK

Tel: 02039 151930

Email: rp@globalecommexperts.com

UK: Global E-Commerce Experts

Rijnlanderweg 766 Unit H, 2132 NM Hoofddorp Netherlands

Tel: +44 2039 151930

Email: rp@globalecommexperts.com

The Waste Electrical and Electronic Equipment (WEEE)



This marking shown on the product or its literature indicates that it should not be disposed of with other household wastes at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of waste and recycle it responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling. Business users should contact their suppliers and check the terms and conditions of the purchase contract. This

product should not be mixed with other commercial wastes for disposal.



For Users in USA and Canada

FCC Statement:

The United States Federal Communications Commission (in 47 CFR15.105) has specified that the following notice be brought to the attention of users of this product: Kodak Printomatic+.

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules and Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Modifications (part 15.21)

Any changes or modifications made to this device that are not expressly approved by C&A Marketing may void the user's authority to operate the equipment.

For further information, contact:

C+A Global
114 Tived Lane East, Edison, NJ 08837
Email: kodak@camarketing.com
Tel: 1-844-516-1539
Web: www.kodakphotoplus.com

This equipment complies with FCC and Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Cet équipement est conforme aux limites d'exposition aux radiations définies par le Canada pour des environnements non contrôlés. Cet équipement doit être installé et utilisé à une distance minimum de 20 cm entre l'antenne et votre corps.

Cet émetteur ne doit pas être installé au même endroit ni utilisé avec une autre antenne ou un autre émetteur.

Notice to Users in Canada (5 GHz)

EN: CAUTION: When using IEEE 802.11a wireless LAN, this product is restricted to indoor use, due to its operation in the 5.15- to 5.25-GHz frequency range. The Innovation, Science and Economic Development Canada requires this product to be used indoors for the frequency range of 5.15 GHz to 5.25 GHz to reduce the potential for harmful interference to co-channel mobile satellite systems. High-power radar is allocated to the primary user of the 5.25- to 5.35-GHz and 5.65- to 5.85-GHz bands. These radar stations can cause interference with and/or damage to this device.

FR: ATTENTION: Lors de l'utilisation du réseau local sans fil IEEE 802.11a, ce produit se limite à une utilisation en intérieur à cause de son fonctionnement sur la plage de fréquences de 5,15 à 5,25 GHz. Innovation, Science et Développement Économique Canada stipule que ce produit doit être utilisé en intérieur dans la plage de fréquences de 5,15 à 5,25 GHz afin de réduire le risque d'interférences éventuellement dangereuses avec les systèmes mobiles par satellite via un canal adjacent. Le radar à haute puissance est alloué pour une utilisation principale dans une plage de fréquences de 5,25 à 5,35 GHz et de 5,65 à 5,85 GHz. Ces stations radar peuvent provoquer des interférences avec cet appareil et l'endommager.

Kodak does NOT manufacture this Product or provide any Warranty or support.

KODAKPHOTOPLUS.COM

The Kodak trademark, logo, and trade dress are used under license from Kodak Company.

PRINTOMATIC+ is a trademark of C&A IP Holdings, LLC in the U.S., the European Union, and the United Kingdom.

ZINK, ZERO INK, and the ZINK logo are trademarks of ZINK Holdings, LLC, registered in the U.S. and other countries.

microSD is a trademark of SD-3C LLC in the U.S. and/or other countries.

All other products, brand names, company names, and logos are trademarks of their respective owners, used merely to identify their respective products, and are not meant to connote any sponsorship, endorsement, or approval.

Made in Vietnam

Distributed by C&A Marketing, Inc. under license from Kodak. C&A Marketing, Inc., 114 Tived Lane East, Edison, NJ 08837 USA

© 2025. C&A IP Holdings LLC. All Rights Reserved.

