

ACCELERATOR LENS ADAPTER

USER MANUAL

LAG-MFT-CEF

Canon EF Lens to Micro Four Thirds Mount



THANK YOU FOR CHOOSING VELLO


The Vello Accelerator Lens Adapter is for attaching Canon EF-mount lenses to Micro Four Thirds cameras. It allows a wider field of view on Micro Four Thirds sensors by magnifying the angle of view by $0.71\times$. This also provides an extra stop of light without decreasing image quality. For example, mounting a 50mm f/1.4 lens to a Micro Four Thirds sensor will usually give you a 100mm angle of view. By adding the Accelerator, you effectively produce a focal length of 71mm with a stepped-down f-stop of f/1.0. This is a great advantage for the widely accepted Micro Four Thirds format.

The Vello Accelerator affords additional benefits, such as a near-silent aperture toggle which is ideal for quietly selecting the f-stop during video recording. It has four elements in four groups to maintain image quality, a USB port for firmware updates, and a detachable tripod foot that works with most 1/4-20 mounts as well as Arca-type head assemblies.

PRECAUTIONS

- Avoid sandy or dusty environments when using this adapter.
- Handle the adapter with care. Avoid impacts and vibrations.
- Clean the adapter by wiping it with a soft, dry cloth.
- Be sure to read the operating instructions for your digital camera.
- Do not use solvents such as benzene, alcohol, or detergents to clean the adapter.
- Keep this unit away from children.
- Keep this unit away from water and flammable gases or liquids.
- Use only parts provided by the manufacturer.
- Please read and follow these instructions. Keep this manual in a safe place.
- All images are for illustrative purposes only.

OVERVIEW

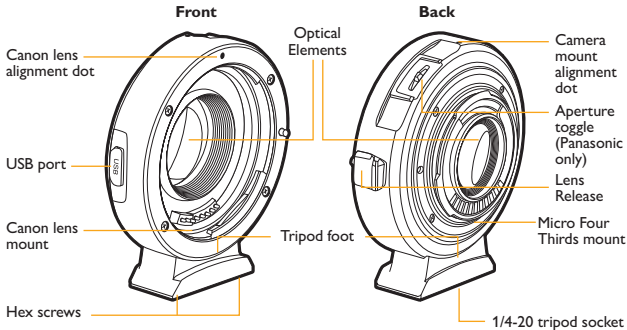

CONTENTS

- Vello LAG-MFT-CEF lens adapter for Canon EF Lenses to Micro Four Thirds Mount
- Front and rear caps
- Removable tripod foot
- 2 mm hex key
- Protective case
- User manual



MOUNTING THE LENS ADAPTER

Note: Place the lens and camera on a stable, flat surface when mounting or removing the Accelerator Lens Adapter.

1. Turn the camera's power off, and remove all protective caps.



2. Line up the alignment dots on the lens adapter and the camera, and carefully insert the lens adapter into the camera's lens mount. Rotate the Accelerator clockwise until it locks into place.

3. Line up the alignment dot on the lens with the alignment dot on the lens adapter, and carefully insert the lens. Rotate the lens clockwise until it locks into place.



APERTURE CONTROL (PANASONIC ONLY)

The aperture control toggle allows you to quietly open and close the aperture without clicking a camera dial or rotating a lens ring. Since it minimizes camera vibrations and noise, you can use it to change aperture during video recording.



Press the toggle towards  to close the aperture.

Press the toggle towards  to open the aperture.

REMOVING THE LENS ADAPTER

1. Turn the camera's power off.
2. Press and hold the release pin on the lens adapter, and carefully rotate the lens counterclockwise to detach it from the adapter.



3. Reattach the front lens cap to the lens adapter.
4. Press and hold the lens release button on the camera, and carefully rotate the lens adapter counterclockwise to detach it from the camera.
5. Reattach the rear lens cap to the lens adapter.

REMOVING THE TRIPOD FOOT

Use the included hex key to loosen the hex screws until the foot can be removed from the lens adapter.

Note: If your lens has a built-in tripod collar, use the collar on the lens to mount the assembly to the tripod.



FIRMWARE UPDATE

Go to vellogear.com to check for the latest available updates for your lens adapter. Use the USB port to connect the adapter to your computer, and follow the update instructions.

SPECIFICATIONS

Compatible Lenses	Canon EF
Compatible Cameras	Micro Four Thirds
Optical Design	4 elements in 4 groups
Step-Down Amount	1 f-stop
Angle-of-View Multiplier	0.71×

Lens Mount	Canon EF
Camera Mount	Micro Four Thirds
Tripod Thread	1/4-20
Dimensions (H × W × D)	2.95 × 2.79 × 0.95 in. (7.5 × 7.1 × 2.4 cm)
Weight	4.2 oz. (119 g)

ONE-YEAR LIMITED WARRANTY

This VELLO product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Vello Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Vello along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.vellogear.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

VELLO is a registered trademark of the Gradus Group.

© 2019 Gradus Group LLC. All Rights Reserved.

All other trademarks are the property of their respective owners.

www.vellogear.com

