

C922 PRO STREAM WEBCAM

Setup Guide | Guide d'installation



logitech®

LANGUAGES

English 3

Français 11

Español 19

Português 27

C922 PRO STREAM WEBCAM DESIGNED FOR SERIOUS STREAMERS

Designed for serious streamers only, the Logitech® C922 Pro Stream Webcam comes fully equipped to let you broadcast your talent to the world: full HD 1080p at 30fps or 720p at 60fps streaming and customizable background replacement.



WHAT'S IN THE BOX

 
 
- C922 Pro Stream Webcam
- User documentation
- Tripod*
- 3-Month XSplit License*

*Tripod and 3-month XSplit license only supplied with some packages.




WEBCAM FEATURES

1. Full HD glass lens with autofocus
2. Dual Microphone
3. Activity light
4. Flexible clip/base
5. Tripod attachment

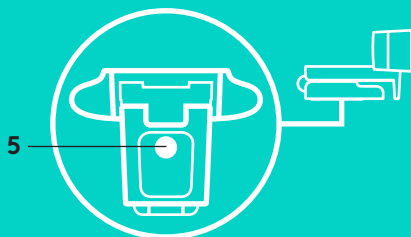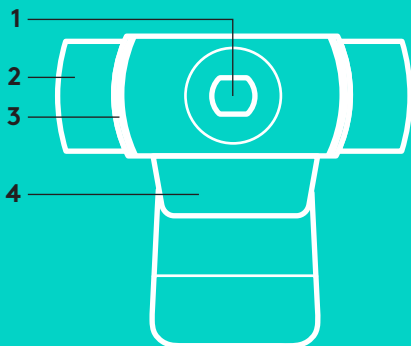

QUICK SETUP

 1

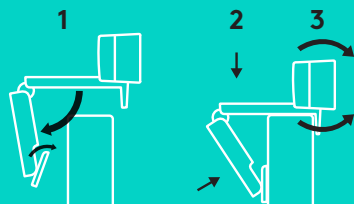

2



3



To use your C922 Pro Stream Webcam, simply plug it into your computer, using the USB cable, and run your favorite app:

- XSplit or OBS to stream online
- Microsoft Camera App (Windows) or QuickTime Player (Mac) to record photos or video
- Skype, Facetime® for Mac or Google Hangouts™ for video call

To update your camera settings, such as exposure or focus, please go to www.logitech.com/support/c922.

Download the ChromaCam by Personify for C922 app to use the background replacement technology in your live streams: www.logitech.com/support/c922.

HOW TO STREAM WITH C922 – XSPLIT BROADCASTER

To stream with Logitech C922, complete the following steps:

1. Launch XSplit Broadcaster.
2. Go to Add > Webcam...> Logitech C922 Pro Stream Webcam.
3. Use Logitech recommended settings or adjust them manually to your liking.

Refer to the XSplit Documentation at <http://xsplit.com> for more information.



HOW TO STREAM WITH A CUSTOM BACKGROUND – XSPLIT BROADCASTER

To stream with Logitech C922 and a custom background, complete the following steps:

1. Install ChromaCam by Personify for C922 from www.logitech.com/support.
2. Launch XSplit Broadcaster.
3. Go to Add > Webcam...> ChromaCam by Personify for C922. The ChromaCam app will launch automatically.
4. Select the required background or add your own in ChromaCam.

Refer to the XSplit Documentation at <http://xsplit.com> for more information.



HOW TO STREAM WITHOUT BACKGROUND– XSPLIT BROADCASTER

To stream with Logitech C922 without background, complete the following steps:

- Install ChromaCam by Personify for C922 from www.logitech.com/support.
- Launch XSplit Broadcaster.
- Go to Add > Webcam...> ChromaCam by Personify for C922. The ChromaCam app will launch automatically.
- Select the default virtual green screen background in ChromaCam.
- In XSplit Broadcaster, right-click your webcam capture to go into Camera Settings.
- Navigate to the “Color” tab.
- Select “ChromaKey” option, and make sure green is selected to remove the virtual green screen.

Refer to the XSplit Documentation at <http://xsplit.com> for more information.



TIPS/ADVICE

To achieve the best results when streaming, the following points should be followed:

- Avoid wearing green outfits when using the virtual green screen.
- Make sure that you are well-lit to appear at your best during streaming.

To achieve a constant 720p/60fps stream:

- Ensure that any lighting comes from behind the webcam
- Use a “keylight”, a main light source to light up your face.
- Use a softer “fill light” to reduce shadows on your face from the keylight.
- Keep lighting behind you to a minimum.
- Use natural lighting or bright white lights to provide neutral colors.
- Try to use lighting that you can control the brightness on.