




60mm F2.8 II
INSTRUCTION

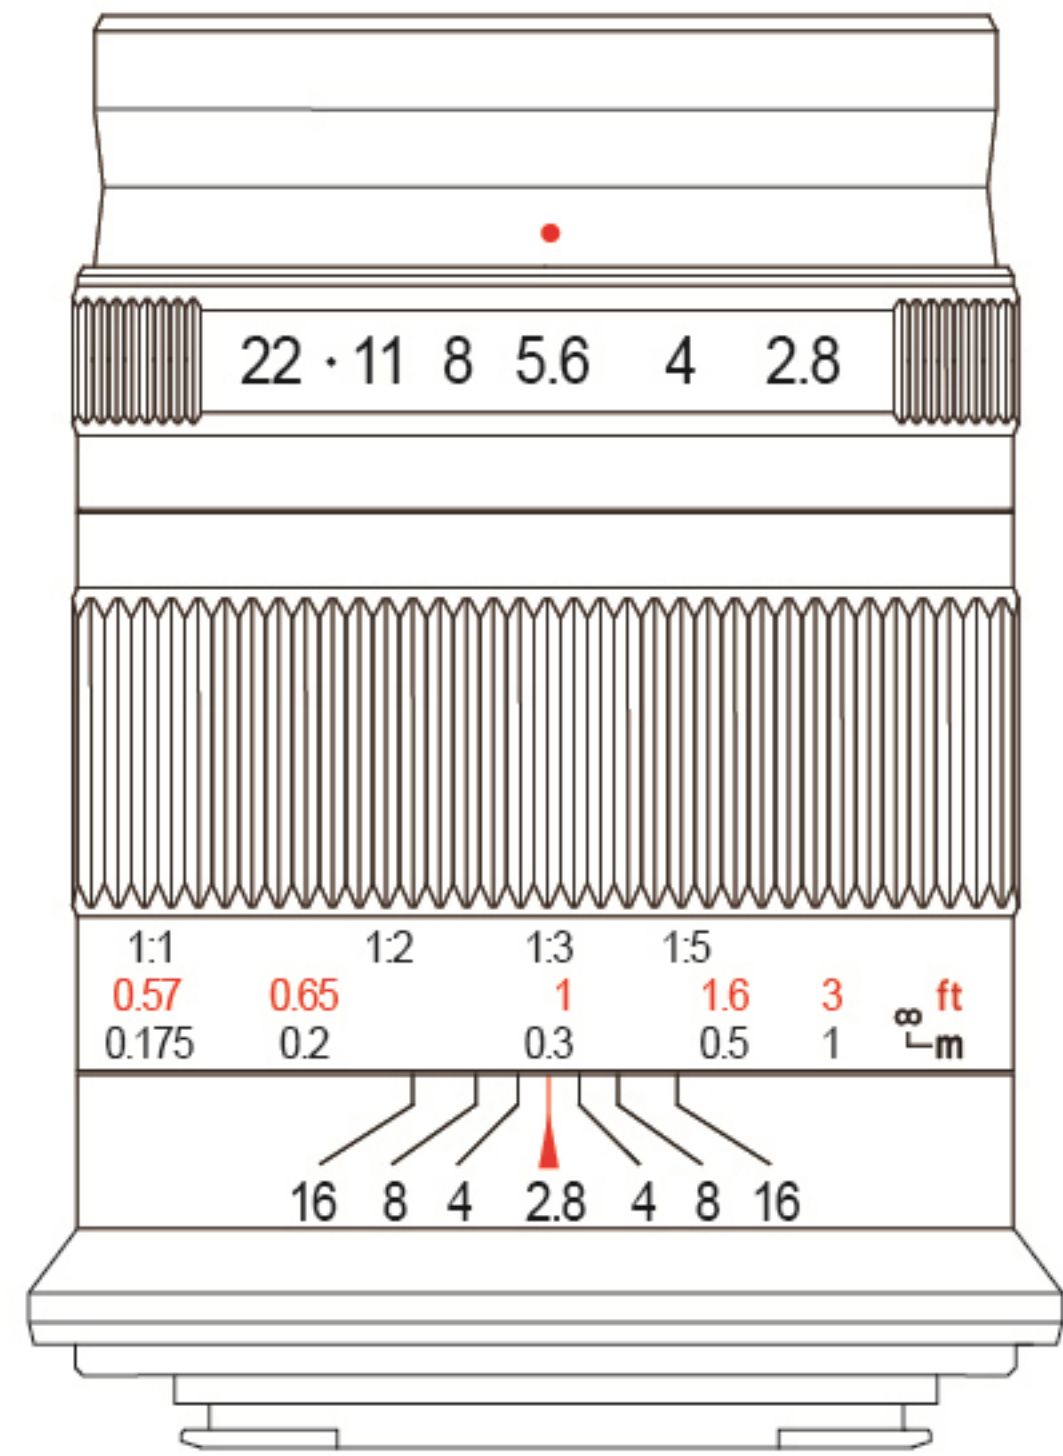

If you are using the manual lens for the first time, be sure to read this instruction sheet in detail.

LENS MAINTENANCE

⚠ The following points are to ensure the safety of the user and the lens.

1. Do not put the lens be in direct sunlight, otherwise it will cause injuries to your eyes.
2. Do not store the lens in direct sunlight, you should use the lens cover, otherwise it may cause a fire.
3. Avoid moisture or strong impact that will damage the lens.
4. If the lens is dirty or dusty, please wipe it with specified lens cleaning tool or suitable lens cloth.
5. Please do not disassemble the lens on your own. Contact distributor for any issues.

Warm tips:

1. Do not pack the lens too tightly, let it be in a ventilated environment. It can effectively prevent the lens from becoming moldy by keeping it ventilated and dry.
2. Always wipe the lens with a cotton swab to prevent grit and dust rubbing the lens.

LENS PARAMETERS



Focal length	60mm	Blades numbers	9 pcs	Closest focus	0.175m
Frame type	APS-C	Optical structure	8 groups, 11elements	Lens anti-shake	Without anti-shake
Lens material	metal	Angle of view	26.4°	Focusing method	Manual focusing
Weight	≈340g	Maximum aperture	F2.8	Filter size	49mm
Aperture ring	De-Clicked	Minimum aperture	F22		

Applicable models: Mirrorless cameras of Sony, Nikon, Fujifilm FX series, Panasonic M4/3 series, Canon EOS-M series.

WARRANTY REGULATIONS

- Dear customers:
Thank you for purchasing 7Artisans products. In order to provide you with a better service, please read the following contents carefully, fill in and keep this warranty card properly.
1. The warranty card is applied to customers all over the world.
 2. Customers can enjoy free maintenance service within one year from the date of purchase if there are any product quality problems based on normal use(non-manualdamage) and the products are not disassembled and repaired by themselves.
 3. The customers are requested to provide the warranty card and valid purchase vouchers for free maintenance based on the warranty card information and purchase vouchers are coincident. Failure to provide or both inconsistent information, 7Artisans shall have the right to refuse to provide free maintenance service.
 4. 7Artisans declines to provide free maintenance service in the following situation, but can provide paid maintenance service and charge according to the actual situation.
 - a: The product date of the product is beyond the warranty period.
 - b: Warranty card or purchase voucher cannot be identified after artificial alteration.
 - c: Damage caused by unauthorized disassembling or repairing.
 - d: Damage caused by failure to operate in accordance with the company's instruction.
 - e: Damage caused by improper use and storage, such as product damage caused by physical impact, water, improper storage, smudge, etc.

LENS REPLACEMENT STEPS


- 1.Turn on the function of 'Release w/o lens' , otherwise the camera will not be able to photograph.

Picture example:


- 2.Please assemble the lens by aligning the lens mount point with camera body mount point, rotate lens clockwise. When you hear a click sound, the lens is in the right place.

Picture shows the lens mount point.

Note: All 7Artisans Lenses marks are with red or white two colors single dot.

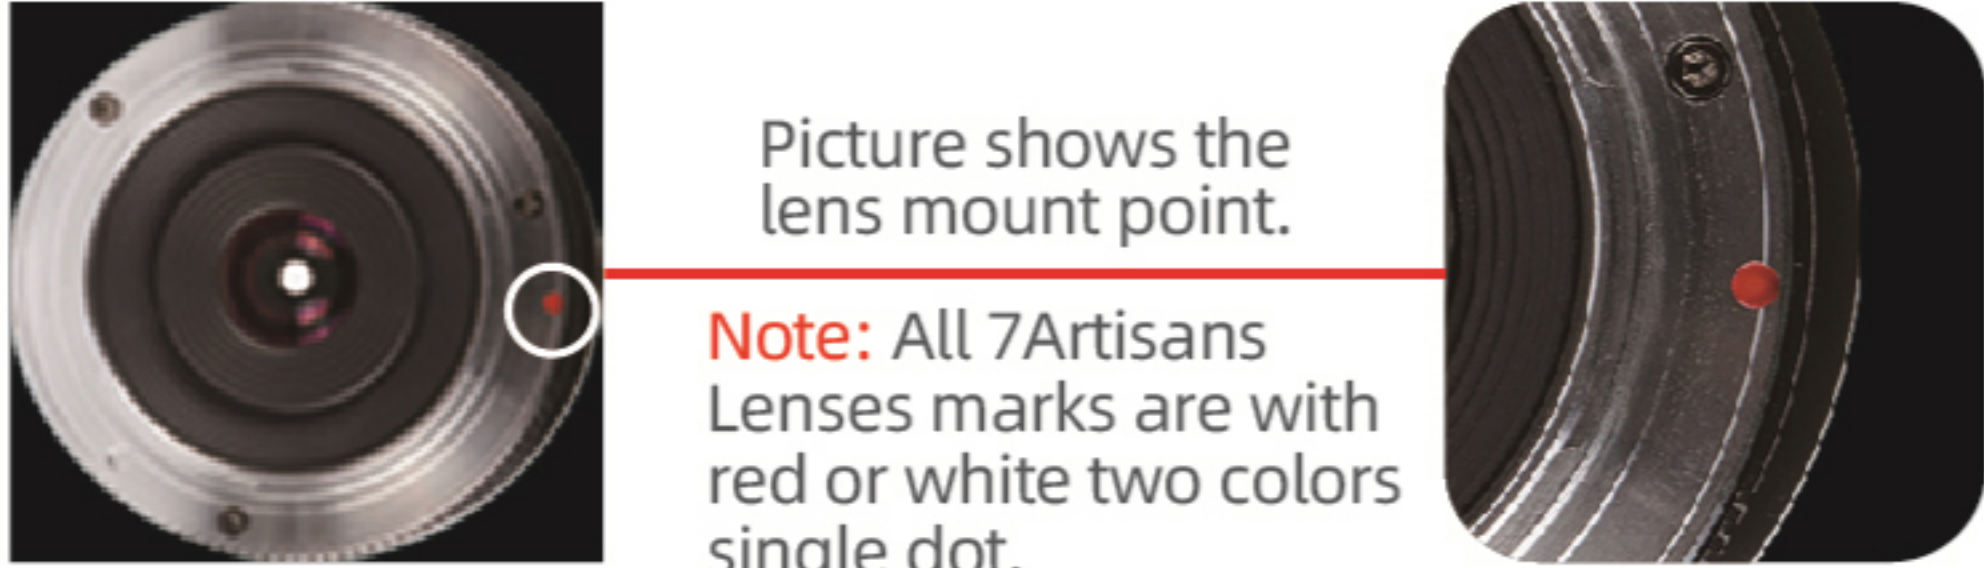
- 3.To remove the lens from camera, press the "release" button, then rotate the lens counter clock-wise.

AFTER SALES SERVICE

Product Model: _____

Return Address: _____

Contact number: _____

Date of purchase: _____

Purchase Channels: _____

Reasons for replacement: _____