




MOBILE VLOGGING KIT

CONTENTS

SMART PHONE USAGE SETUP

MIRRORLESS DSLR CAMERA USAGE SETUP

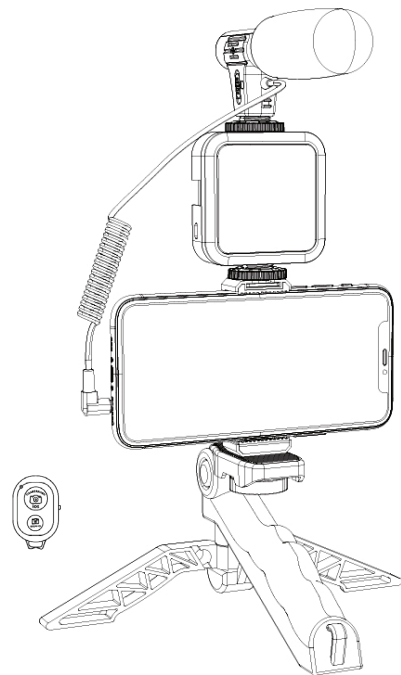

SHOTGUN MICROPHONE

- Super cardioid, unidirectional shotgun mic
- Foam windscreen
- Includes AAA battery



LED VIDEO LIGHT

- 36 Powerful LEDs
- Built-in rechargeable lithium battery & cable
- Includes 3 cold shoe mount for microphone



SMART PHONE HOLDER

- Includes cold shoe mount
- Expandable up to 4"



WIRELESS REMOTE


- 30' range
- Includes CR2032 battery



TABLETOP TRIPOD


- Adjustable to 90°
- Ergonomic pistol grip design

1.

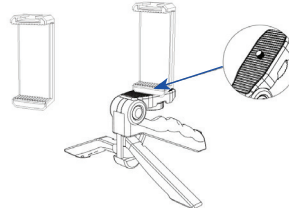


- Pull tripod legs apart to open/close tripod
- Press red button to rotate tripod mount
- Thread phone holder onto tripod base

2.

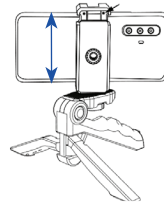


- Extend phone holder to fit your device
- Release holder to secure phone

3.

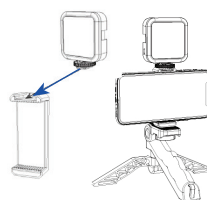


- Attach LED light to top of phone holder with shoe mount
- Tighten knurled knob on light mount to secure

4.

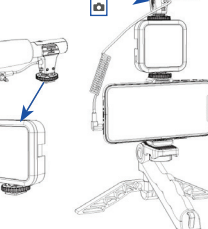


- Attach microphone to light using shoe mount
- Tighten knurled knob on microphone to secure
- Set microphone switch up to smart phone
- Plug 3.5mm cord into device's headphone jack*

1.

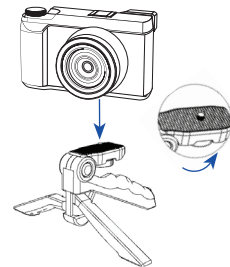


- Pull tripod legs apart to open/close tripod
- Press red button to rotate tripod mount
- Tighten knob on tripod to bottom of DSLR

2.

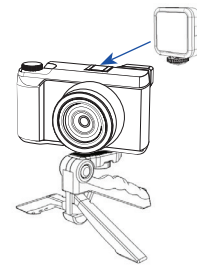

- Slide LED shoe mount onto DSLR mount
- Tighten knurled knob on light to secure

3.

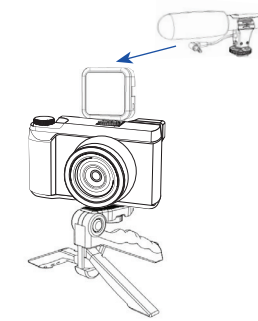

- Attach microphone to top of light using shoe mount
- Tighten knurled knob on microphone to secure

4.



- Set microphone switch down to DSLR
- Plug 3.5mm cord into DSLR audio jack




PROFESSIONAL PHOTOGRAPHY MADE SIMPLE


SAVAGEUNIVERSAL.COM

*Microphone jack plugs directly into mobile phones equipped with a headphone/microphone jack. A separate adapter is required for phones without a jack. Consult your phone manufacturer to determine charge port type and adapter required (sold separately.)


BATTERIES & CHARGING

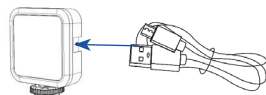

Plug USB end of the included charge cord into any USB to household adapter or USB device with charging capability. Plug the other end into the included LED video light. Full charge can take up to 2 hours if the light is fully drained.

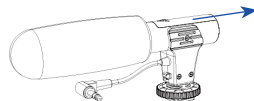

Slide the battery cover on top of the microphone back and insert the included AAA battery. Replace cover.

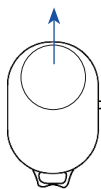


Slide the battery cover on the bottom of the Bluetooth shutter release back and insert the included CR2032 button battery. The + sign should be facing up and visible. Replace cover by sliding the tab in, pressing down on the cover and then sliding shut.


OPERATION




Pistol Grip Mode

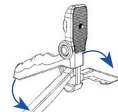

Tripod Mode

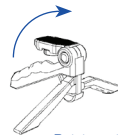


Rotate up to 120°

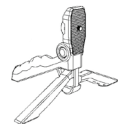


Vertical



Horizontal

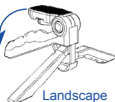

Landscape

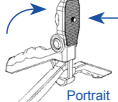

Portrait

The included tripod can be used in either pistol grip mode, or tripod mode.

For pistol grip mode, collapse the legs on the tripod to form a pistol grip hand. This feature will help stabilize the video.


For tripod mode, separate the two smaller tripod legs and unfold, and set on flat surface.

Rotate tripod up to 120° by pressing the red buttons on both sides and tilting to desired position.

For landscape position, thread the included cell phone holder using the bottom threads onto the top of the table top tripod by turning the knurled knob under the tripod platform clockwise.

For portrait position, thread the cell phone holder using the thread on the back of the holder. Push the red buttons on the side of the tripod and rotate the tripod platform between the 2 short tripod legs until the platform is perpendicular to the surface.

SHOTGUN MICROPHONE

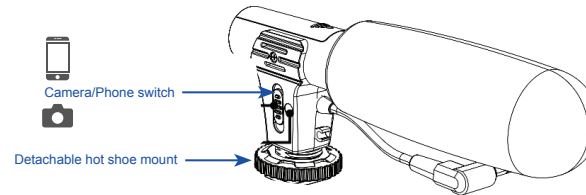

MICROPHONE WITH SMART PHONE



For cell phone: Plug the 3.5 mm microphone plug on the microphone directly into the headphone/charge jack on your cell phone when possible or using a 3.5 to Lightning/USB-C adapter (not included). Push the switch on the microphone to the up/cell phone icon position. The cell phone should detect the microphone and begin recording.

MICROPHONE WITH MIRRORLESS DSLR CAMERA, LAPTOPS & OTHER DEVICES

Repeat above steps but push the switch on the side of the microphone to the down/camera icon position.

This is a unidirectional microphone. It is designed to pick up and improve voices directly in front of the microphone and block out ambient noise. This feature can be particularly helpful when recording in noisy venues.

LED VIDEO LIGHT

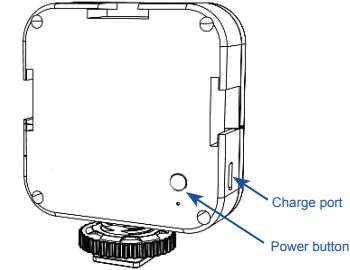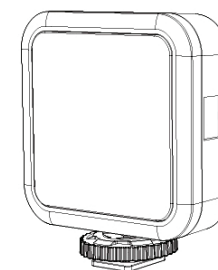

LED VIDEO LIGHT

Press and hold the LED light On/Off switch for 3 seconds to turn on/off.

There are 3 brightness settings (1/3, 1/2, full). Press the On/Off switch to cycle through the three brightness levels. A fully charged light should illuminate at full power for 60 minutes (longer at lower power settings). After 60 minutes, the light will gradually dim.

To charge light, plug USB cord into any USB-to-household adapter. Full charge time is up to 2 hours.