



PROMO BACKGROUND STAND

Assembly & Usage Instructions

CONTENTS

- (2) T-Legs
- (2) Telescoping uprights
- (4) Crossbar sections
- (2) Crossbar connectors
- (2) Allen head screws
- (1) Allen wrench
- (1) Carry bag



USE OF SAVAGE PROMO STAND

Telescoping crossbars can be adjusted to accommodate backdrops or banners as small as 6' wide up to 9' 8" wide. Telescoping upright stands can be adjusted from 40" tall up to 8' tall. Detach one side of top crossbar from the upright stand to slide on backdrops that have a sewn-in pole pocket or simply secure the material to the crossbar using standard clamps. To pull out wrinkles from the backdrop or banner, clamp the bottom edge of the material to the bottom crossbar with clamps. This support stand is an especially ideal system for cloth backdrops.

1) ASSEMBLING T-LEG BASE


Slide telescoping upright stand section through the hole located on top of the T Leg. Use the included allen wrench to tighten the upright using the included Allen head screw.



REPEAT TO ATTACH SECOND UPRIGHT TO THE SECOND T LEG

2) ASSEMBLING UPRIGHTS

Extend the upright section nearest the top 6" and tighten for both uprights.

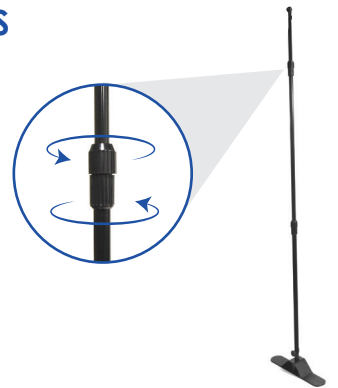

3) ASSEMBLING CROSSBARS

Connect the 2 sections of both crossbar sets using the silver crossbar connectors, making sure that the pin on the connector is lined up with the hole on each crossbar section.

Push together until the silver pin snaps into the hole on the crossbar.



4) ATTACHING TOP CROSSBAR TO UPRIGHT

Unscrew the knurled knob on the end of each crossbar section until the screw is completely unthreaded.

Slide the threaded knob through the hole nearest the top of the upright.

Thread one side of the crossbar into the threaded knob until tight.



REPEAT ON SECOND UPRIGHT ON OPPOSITE SIDE

5) RAISING UPRIGHTS

Raise the lowest section of the upright stand on both sides and re-tighten.




RAISE UPRIGHT LOWER SECTIONS 6'

6) ATTACHING LOWER CROSSBAR TO UPRIGHT

Repeat Step 4 to connect the second crossbar to the upright stands using the drilled holes located at the bottom of the lowest upright stand section.

Be sure to raise the lowest section of the upright 6" before attempting to connect the crossbar.

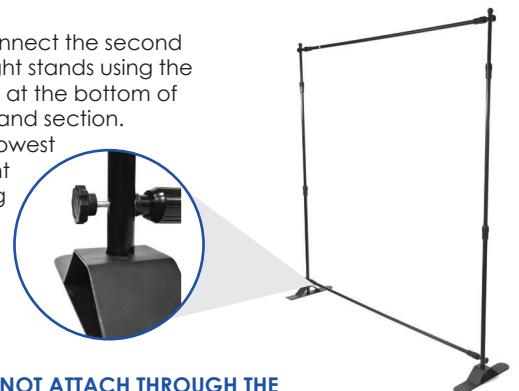

THE CROSSBAR WILL NOT ATTACH THROUGH THE DRILLED HOLES IF THE UPRIGHT IS ALL THE WAY DOWN