

# ACCELERATOR LENS ADAPTER

## Canon EF to Micro Four Thirds Mount

If you are unable to focus to infinity, you may need to adjust the Accelerator Lens Adapter's inner lens element.

Rotate the lens element in quarter turn increments, and check the focus after each adjustment.

**Clockwise** moves the lens element toward the camera sensor.

**Counterclockwise** moves the lens element away from the camera sensor.

