



AC Adapter and
DC Coupler Kit

Owner's
Manual

THANK YOU FOR CHOOSING WATSON

The Watson AC Adapter and DC Coupler Kit delivers continuous power to your camera, so you won't need to replace batteries. Attach the AC adapter to a regular wall outlet and pop the DC coupler into your camera. You'll have a continuous power source allowing extended shooting, so you won't have to disrupt your workflow.


PRECAUTIONS

- The Watson AC Adapter and DC Coupler Kit should be used only with compatible devices specified in this manual.
- If you notice smoke, noise, or an unusual smell from the AC Adapter and DC Coupler Kit, discontinue use immediately. Remove the AC Adapter and DC Coupler, and take the devices to a Watson authorized reseller.
- Remove the AC Adapter and DC Coupler when not in use.
- Do not attempt to disassemble.
- Keep fingers clear of contact with the prongs of the AC plug and AC outlet, and use caution when inserting or removing the AC plug from the AC outlet. If the prongs of the AC plug are bent, they can become a shock hazard.
- Avoid exposing this product to water or extreme humidity, and keep it in a cool, dry place.
- Keep out of reach of children.
- All images are for illustrative purposes only.


CONNECT THE DC COUPLER TO THE AC ADAPTER

Depending on your model, you will need to make one or both of these connections.


Insert the AC adapter's plug into the DC coupler.

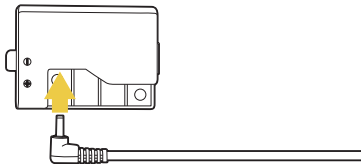


Insert the DC coupler's plug into the AC adapter's socket.

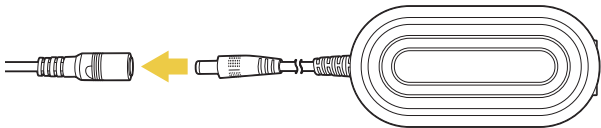


INSERT THE DC COUPLER INTO YOUR CAMERA

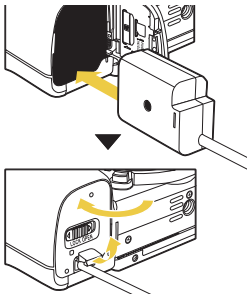

Note: If the battery chamber door has no cord slot and isn't removable, leave the chamber door open.

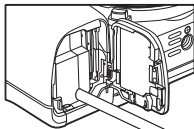

CONNECT THE POWER CORD

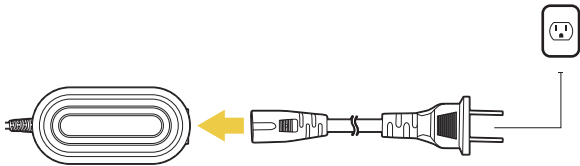

ONE-YEAR LIMITED WARRANTY

This Watson product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Watson Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Watson along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.Watsongear.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

Watson is a registered trademark of the Gradus Group.

All other trademarks are the property of their respective owners.

