




Canon

imageFORMULA
RS40

Setup Guide

Check the included items

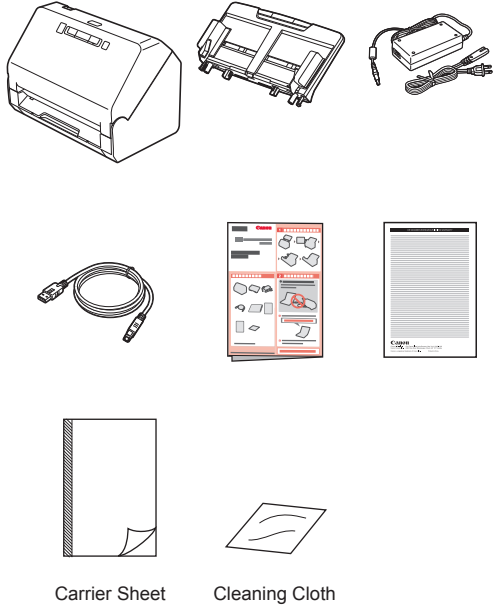


Carrier Sheet

Cleaning Cloth

Setup Disc is not included.


1 Remove the protective material

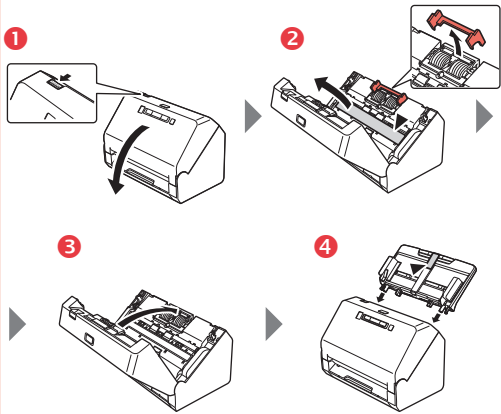

2 Install Software

IMPORTANT

Do not connect the scanner to the computer before installing the software.

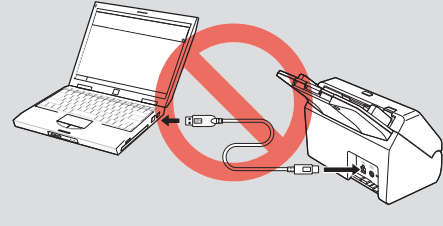

1 Download the software.

<https://software.canon-elec.co.jp/ims/rs40>



2 Execute the downloaded software and follow the on-screen instructions.

Setup is complete.

1 Preparing Photos

1 Clean your photo.


- Use a soft, dry cloth to wipe the front and back of your photos to remove dust, dirt or adhesive that could potentially scratch your photos.
- Any dust on your photos can cause white lines to appear in scanned images.
- Clean the scanner glass and rollers after every 300 scans using the included Cleaning Cloth.

2 Organize your photos by subject, date, or place where your photos were taken.

- You can give each batch of photos a custom file name.

2 Loading Photos

1 Adjust the photo guides to fit the width of the photo.

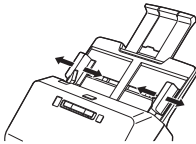


2 Fan your stack of photos to make sure they are not stuck together.

- Stuck photos can feed through the scanner at the same time or jam in the scanner, potentially damaging your photos.



3 Load your photos in the center of the input tray facedown and top edge first.


- Use the included Carrier Sheet for odd-sized, small, delicate or important photos.
- If you have both portrait- and landscape-oriented photos in the same stack, you can rotate the portrait images after scanning.

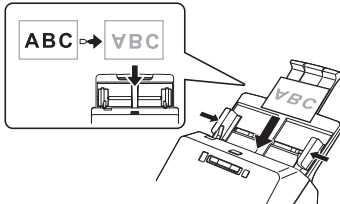

3 Scan


1 Start CaptureOnTouch on your PC.

2 Click [Photo scan] button.

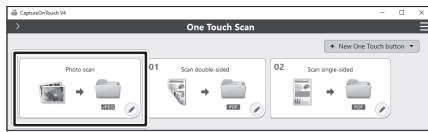


Hint

To change scan settings, such as the file name or save destination, click . Change the settings on the [Output 1] tab.

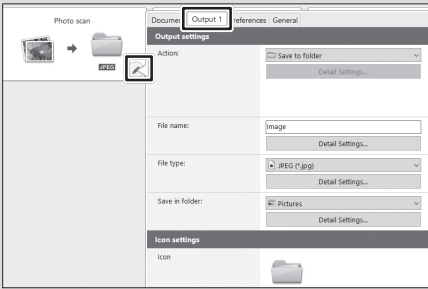

3 Review the scanned image and click the [Finish] button.

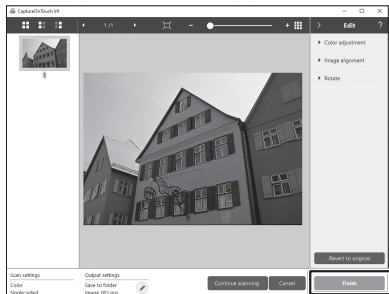


Review, delete, and edit images.

Click in the upper right of the screen for the usage details.

4 Check the destination.

- Link to the destination folder is displayed.

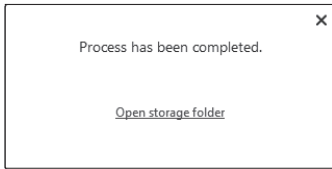


4 Other scanning method with CaptureOnTouch

Standard Scanning

1 Select Document Type.

2 Select Destination.

3 Click [Scan] button.

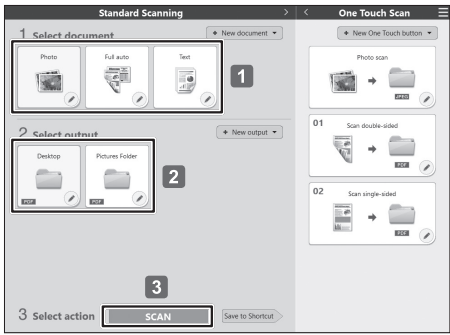


Hint

Refer to the Help of CaptureOnTouch for details.

Windows

Click and select [Help] from the menu to open the Help.

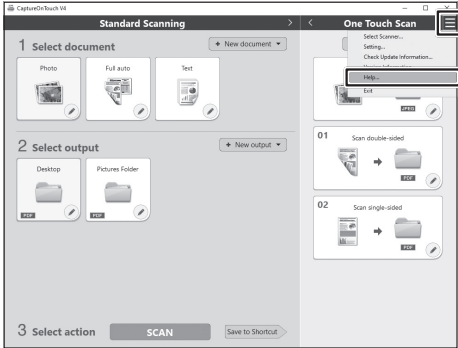


MAC

Click [Help] in the menu bar and select [CaptureOnTouch Help].



Scanning with Start Button

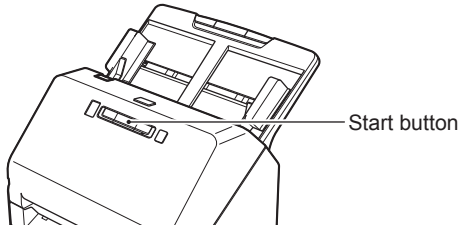

You can save frequently used settings as One Touch Buttons, which can be assigned to a numbered button on the scanner. This allows the user to begin a scan from pressing the Start button on the device. If you place the document, select a Job No. using the Job Select button and press the start button, CaptureOnTouch will start and the document will be scanned.

Setting method:

Select a panel on [One Touch Scan] [Preferences] [Assign this button to]

Scanning a photo with a Carrier Sheet

- Use the Carrier Sheet for fragile photos, valuable original documents, or artwork.
- See the User Manual for the restrictions and recommendations.

Help

User Manual

Windows : [Start] - [Canon RS40] - User Manual
Mac : [Applications] - [RS40 User Manual]

CaptureOnTouch Help

Windows : Click the CaptureOnTouch icon in the taskbar, and select [Help] from the menu.
Mac : Click [CaptureOnTouch Help] from the [Help] menu while the main screen of CaptureOnTouch is displayed

Scanner Driver Help

Open the scanner driver from a TWAIN-compatible application, and click the [Help] button.

Technical support

USA
By internet : www.usa.canon.com/support
By phone : 1-800-423-2366

Canada
By internet : www.canon.ca/support
By phone : 1-800-OK-CANON (652-2666)

Trademarks

- Canon and the Canon logo are registered trademarks, of Canon Inc. in the United States and may also be trademarks or registered trademarks in other countries.
- imageFORMULA is a trademark of CANON ELECTRONICS INC.
- Microsoft, Windows, PowerPoint, and SharePoint are registered trademarks or trademarks of Microsoft Corporation in the United States and other countries.
- Microsoft product screen shot(s) reprinted with permission from Microsoft Corporation.
- OS X and macOS are the trademarks of Apple Inc., registered in the U.S. and other countries.
- ENERGY STAR® is a registered trademark of the United States Environmental Protection Agency.
- Other product and company names herein may be the trademarks of their respective owners. However, the TM and [®] symbols are not used in this document.

FCC REGULATIONS (For 120V model)

Document Scanner, Model 6130230

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Use of shielded cable is required to comply with Class B limits in Subpart B of Part 15 of FCC Rules.

Do not make any changes or modifications to the equipment unless otherwise specified in the manual. If such changes or modifications should be made, you could be required to stop operation of the equipment.

Canon U.S.A. Inc.
ONE CANON PARK, MELVILLE, NY 11747, U.S.A.
Tel. No. 1-800-652-2666

Copyright

Copyright 2020 by CANON ELECTRONICS INC. All rights reserved.

No part of this publication may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, or by any information storage or retrieval system without the prior written permission of CANON ELECTRONICS INC.

Disclaimers


The information in this document is subject to change without notice.

CANON ELECTRONICS INC. MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL, EITHER EXPRESS OR IMPLIED, EXPECT AS PROVIDED HEREIN, INCLUDING WITHOUT LIMITATION, THEREOF, WARRANTIES AS TO MARKETABILITY, MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE OF USE OR NON-INFRINGEMENT. CANON ELECTRONICS INC. SHALL NOT BE LIABLE FOR ANY DIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES OF ANY NATURE, OR LOSSES OR EXPENSES RESULTING FROM THE USE OF THIS MATERIAL.

CANON ELECTRONICS INC. IS NOT LIABLE FOR THE STORAGE AND HANDLING OF DOCUMENTS SCANNED WITH THIS PRODUCT, OR THE STORAGE AND HANDLING OF RESULTING SCANNED IMAGE DATA. IF YOU INTEND TO DISCARD THE ORIGINALS OF SCANNED DOCUMENTS, YOU THE CUSTOMER ARE RESPONSIBLE FOR INSPECTING THE SCANNED IMAGES AND VERIFYING THAT DATA IS INTACT. THE MAXIMUM LIABILITY OF CANON ELECTRONICS INC. UNDER THIS WARRANTY IS LIMITED TO THE PURCHASE PRICE OF THE PRODUCT COVERED BY THE WARRANTY.


Guía de instalación

Compruebe los elementos incluidos

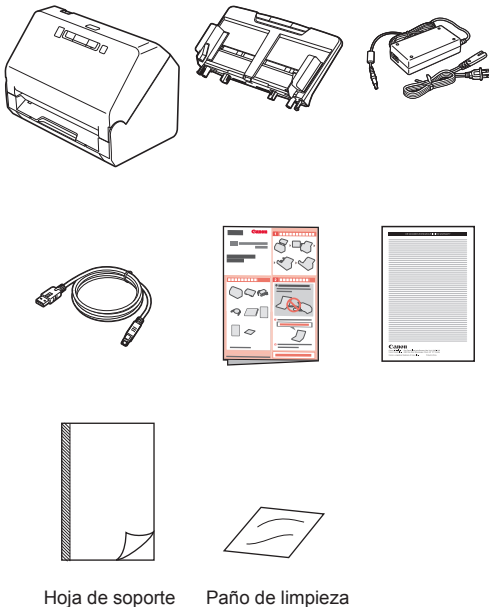

No se incluye el disco de instalación.


1 Retire el material de protección

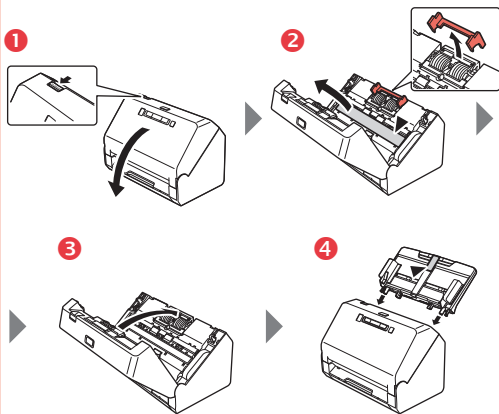

2 Instale el software

! IMPORTANTE

No conecte el escáner al ordenador antes de instalar el software.

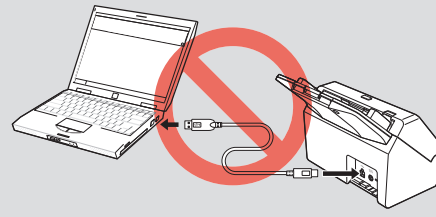

4 Descargue el software.

<https://software.canon-elec.co.jp/ims/rs40>

5 Ejecute el software descargado y después siga las instrucciones de la pantalla.

La configuración se ha completado.

1 Preparación de fotografías

1 Limpie la fotografía.


- Use un paño seco y suave para limpiar la parte delantera y trasera de sus fotografías para retirar el polvo, suciedad o adhesivo que podría potencialmente rayar las fotos.
- La presencia de polvo en las fotos puede ocasionar la aparición de líneas blancas en las imágenes escaneadas.
- Limpie el cristal del escáner y los rodillos tras cada 300 escaneos utilizando el paño de limpieza incluido.

2 Organice sus fotos por asunto, fecha o lugar donde se tomaron las fotos.

- Puede proporcionar a cada lote de fotos un nombre de archivo personalizado.

2 Carga de fotografías

1 Ajuste las guías de la fotografía al ancho de la fotografía.

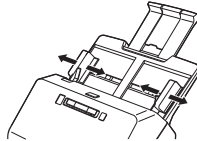


2 Airee la pila de fotografías para garantizar que no se peguen.

- Unas fotos pegadas pueden entrar en el escáner al mismo tiempo o atascarlo, lo que potencialmente podría dañar sus fotos.



3 Cargue las fotos en el centro de la bandeja de entrada boca abajo y con el borde superior primero.

- Use la hoja de soporte incluida para fotos importantes, pequeñas, delicadas o de tamaño extraño.
- Si tiene fotos con orientación horizontal y vertical en la misma pila, puede girar las imágenes en vertical tras realizar el escaneo.

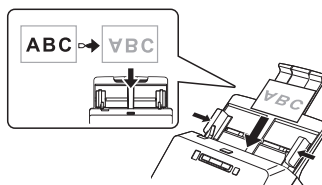

3 Escanear


1 Inicie CaptureOnTouch Lite en su PC.

2 Haga clic en el botón [Escanear foto].




Sugerencia

Para cambiar la configuración de escaneo, como el nombre de archivo o el destino donde se guardará la foto, haga clic en . Cambie el ajuste en la pestaña [Destino 1].

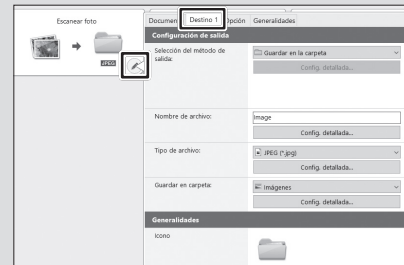

3 Revise la imagen escaneada y haga clic en el botón [Finalizar].

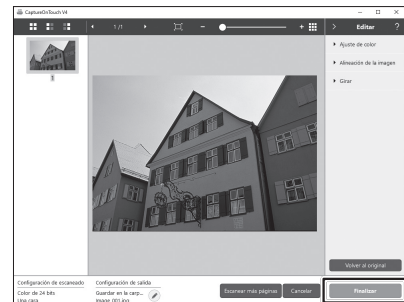


Revise, elimine y edite imágenes.

Haga clic en en la parte superior derecha de la pantalla para ver los detalles de uso.

4 Verifique el destino.

- Se muestra un vínculo a la carpeta de destino.

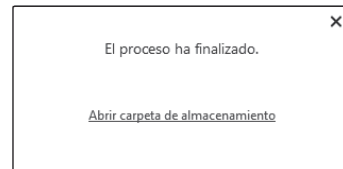


4 Otro método de escaneo con CaptureOnTouch

➔ Escaneado estándar

1 Seleccione el tipo de documento.

2 Seleccione un destino.

3 Haga clic en el botón [ESCANEAR].

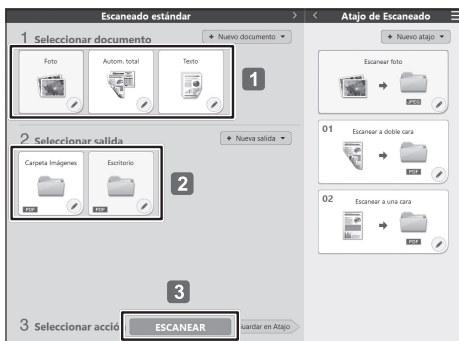

Sugerencia

Consulte la Ayuda de CaptureOnTouch para obtener más información.

Windows

Haga clic en y seleccione [Ayuda] en el menú para abrir la Ayuda.



MAC

Haga clic en [Ayuda] en la barra de menús y seleccione [Ayuda CaptureOnTouch].



Escanear una foto con la Hoja de soporte

- Use la hoja de soporte para fotos frágiles, documentos originales valiosos u obras de arte.
- Consulte el Manual del usuario para conocer las restricciones y recomendaciones.

Ayuda

Manual del usuario

Windows : [Inicio] - [Canon RS40] - Manual del usuario

Mac : [Aplicaciones] - [RS40 Manual del Usuario]

Ayuda de CaptureOnTouch

Windows : Haga clic en el icono de CaptureOnTouch situado en la barra de tareas y seleccione [Ayuda] en el menú.

Mac : Haga clic en la opción [Ayuda CaptureOnTouch] del menú [Ayuda] mientras está abierta la pantalla principal de CaptureOnTouch.

Ayuda del controlador del escáner

Abra el controlador del escáner desde una aplicación compatible con TWAIN y haga clic en el botón [Ayuda].

Soporte técnico

EE. UU.
Por internet : www.usa.canon.com/support
Por teléfono : 1-800-423-2366

Canadá
Por internet : www.canon.ca/support
Por teléfono : 1-800-OK-CANON (652-2666)

Marcas comerciales

- Canon y el logotipo de Canon son marcas comerciales registradas de Canon Inc. en los Estados Unidos y es posible que también sean marcas comerciales o marcas comerciales registradas en otros países.
- imageFORMULA es una marca comercial de CANON ELECTRONICS INC.
- Microsoft, Windows, PowerPoint y SharePoint son marcas comerciales o marcas comerciales registradas de Microsoft Corporation en los Estados Unidos y otros países.
- Las capturas de pantalla de productos de Microsoft se han vuelto a imprimir con permiso de Microsoft Corporation.
- OS X y macOS son marcas comerciales de Apple Inc. registradas en los Estados Unidos y en otros países.
- Otros nombres de productos o empresas que aparezcan en este documento pueden ser marcas comerciales de sus respectivos propietarios. Sin embargo, en este documento no se utilizan los símbolos TM y ®.

Copyright

Copyright 2020 de CANON ELECTRONICS INC. Reservados todos los derechos.

Queda prohibida la reproducción de cualquier parte de esta publicación, así como su transmisión, de ninguna forma ni por ningún medio, ya sea electrónico o mecánico, como la fotocopia o la grabación, o mediante cualquier sistema de almacenamiento o recuperación de datos sin la autorización previa por escrito de CANON ELECTRONICS INC.

Renuncias

La información de este documento puede ser modificada sin previo aviso.

CANON ELECTRONICS INC. NO CONCEDE GARANTÍA ALGUNA SOBRE ESTE MATERIAL, YA SEA DE FORMA EXPLÍCITA O IMPLÍCITA, EXCEPTO LO ESTIPULADO EN ESTE DOCUMENTO, INCLUIDAS, ENTRE OTRAS, LAS GARANTÍAS DE COMERCIABILIDAD, IDONEIDAD PARA UN PROPÓSITO O USO CONCRETO O INCUMPLIMIENTO. CANON ELECTRONICS INC. NO ASUME NINGUNA RESPONSABILIDAD EN CUANTO A LOS DAÑOS DIRECTOS, FORTUITOS O RESULTANTES, INDEPENDIENTEMENTE DE LA NATURALEZA DE ESTOS, O EN CUANTO A LAS PÉRDIDAS O GASTOS QUE SE DERIVEN DEL USO DE ESTE MATERIAL.

CANON ELECTRONICS INC. NO ES RESPONSABLE DEL ALMACENAMIENTO Y MANIPULACIÓN DE LOS DOCUMENTOS ESCANEADOS CON ESTE PRODUCTO NI DEL ALMACENAMIENTO O MANIPULACIÓN DE LOS CORRESPONDIENTES DATOS DE LAS IMÁGENES ESCANEADAS. SI PRETENDE ELIMINAR LOS ORIGINALES DE DOCUMENTOS ESCANEADOS, USTED, COMO CLIENTE, ES RESPONSABLE DE EXAMINAR LAS IMÁGENES ESCANEADAS Y COMPROBAR QUE LOS DATOS CORRESPONDAN EXACTAMENTE CON EL ORIGINAL. LA RESPONSABILIDAD MÁXIMA DE CANON ELECTRONICS INC. SEGÚN ESTA GARANTÍA SE LIMITA AL PRECIO DE COMPRA DEL PRODUCTO AL QUE CUBRE.

Puede guardar frecuentemente los ajustes utilizados como botones de una sola pulsación, que pueden asignarse a un botón de número en el escáner. Esto permite que el usuario comience a escanear pulsando el botón Iniciar en el dispositivo.

Si coloca el documento, seleccione un número de trabajo mediante el botón Seleccionar trabajo y pulse el botón Iniciar; CaptureOnTouch se iniciará y el documento se escaneará.

Método de configuración:

Seleccione un panel en [Atajo de Escaneo] ⇒ ⇒ [Opción] ⇒ [Asignación de botones]

