BoomBox for Bowens Mount

INSTRUCTIONS



OCTAGONAL



SQUARE

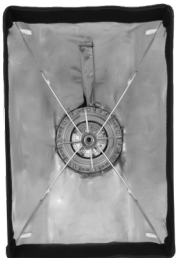

RECTANGULAR



STRIP

angler®

Setting Up the BoomBox

1. For Monolights and studio strobes with Bowens mounts, align the mounting tabs with the Bowens mount and insert the BoomBox into the Bowens mount. Turn the BoomBox clockwise until it locks.

2. Open the BoomBox, and push the center ring over the shaft until it's all the way in, just like an umbrella.

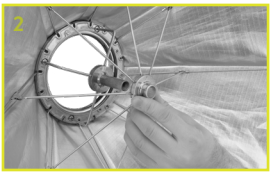

Tip: You may find it easier to hold the base of the shaft through the side opening while pushing the center ring over it.

3. Adjust the BoomBox's orientation by loosening the adapter ring's thumbscrew and rotating the BoomBox. Tighten the thumbscrew until secure.

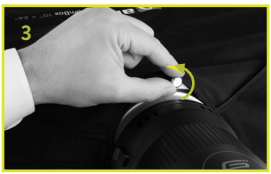

Optional: To add the deflector to the BoomBox, screw the deflector extension into the center stem. Once it's attached, slide the deflector plate onto the extension.

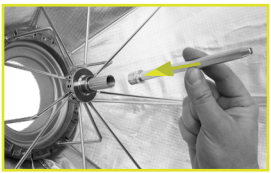

Try experimenting with the curved side of the deflector facing out or in, and by varying the distance from the light source.

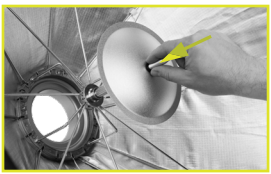

Attaching the Diffusers

The inner and outer diffusers add two levels of diffusion that soften and spread the light for an even and flattering effect. The diffusers can be used with or without the deflector plate.

1. Attach the inner diffuser by attaching the diffuser's touch-connect strips to the touch-connect tabs inside the BoomBox.

2. Attach the outer diffuser by pressing the touch-connect strips against the inner rim of the BoomBox.



Tip: Attach the outer diffuser to the inner edge of the touch-connect strip. This will leave enough room to add a grid (available separately).

Removing the BoomBox

To remove the BoomBox from a Bowens mount:

1. Press the light fixture's Bowens release.

2. Turn the BoomBox counterclockwise and remove it from the light.

3. If necessary, remove the diffuser, deflector, and extension. Then close the BoomBox by carefully pulling on the center ring.



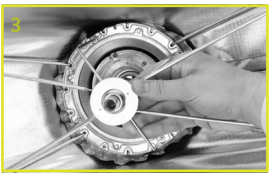

Changing the Adapter Ring

Adapter Rings for Broncolor, Elinchrom, and Profoto are available separately. Make sure to use V2 (144 mm) adapter rings.

1. Unfasten the zipper and pull back the fabric around the BoomBox adapter ring.

2. Use a Phillips screwdriver to remove the screws and washers, then remove the thumbscrew and washer.

3. Remove the adapter ring from the BoomBox.

4. Insert the replacement adapter ring.

5. Replace the washers and screws. Make sure to insert the thumbscrew in the recessed hole. Tighten until secure.

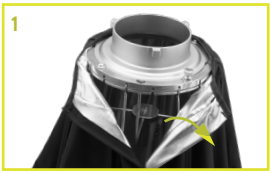

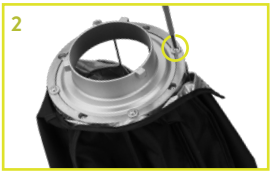





Specifications

OCTAGONAL

	BB-26DB-V2	BB-36DB-V2	BB-48DB-V2
SIZE	26 IN. (66 CM)	36 IN. (91.4 CM)	48 IN. (121.9 CM)
WEIGHT	1.9 LB. (0.84 KG)	2.5 LB. (1.2 KG)	3.4 LB. (1.54 KG)

STRIP

	BB-ST-1024-V2	BB-ST-1236-V2	BB-ST-1255-V2
SIZE	10×24 IN. (25.4×61 CM)	12×36 IN. (30.5×91.4 CM)	12×55 IN. (30.5×139.7 CM)
WEIGHT	1 LB. (0.45 KG)	2.5 LB. (1.1 KG)	2.3 LB. (1 KG)

SQUARE

	BB-SQ-2424-V2	BB-SQ-3636-V2
SIZE	24 × 24 IN. (61 × 61 CM)	36 × 36 IN. (91.4 × 91.4 CM)
WEIGHT	1.6 LB. (0.7 KG)	3 LB. (1.4 KG)

RECTANGULAR

	BB-RE-2436-V2
SIZE	24×36 IN. (61×91.4 CM)
WEIGHT	3 LB. (1.4 KG)

Recommended Accessories



ADAPTER RINGS

MODEL #	MOUNT TYPE
BBAR-PRO-144	PROFOTO
BBAR-BRL-144	BRONCOLOR
BBAR-EL-144	ELINCHROM



GRIDS

MODEL #	COMPATIBLE BOOMBOX
BB-G26-V2	BB-26DB-V2
BB-G36-V2	BB-36DB-V2
BB-G48-V2	BB-48DB-V2
BB-G-2436-V2	BB-RE-2436-V2
BB-G-1024-V2	BB-ST-1024-V2
BB-G-1236-V2	BB-ST-1236-V2
BB-G-1255-V2	BB-ST-1255-V2
BB-G-S36-V2	BB-SQ-3636-V2
BB-G-S24-V2	BB-SQ-2424-V2

One-Year Limited Warranty

This Angler product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. Inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Angler Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Angler along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.anglerlights.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

Angler is a registered trademark of the Gradus Group.

© 2024 Gradus Group LLC. All Rights Reserved.

ANGLER®
A **Gradus Group** Brand

GG7



anglerlights.com