岩石星®
AstrHori®

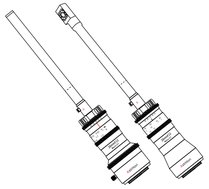

28mmF13 说明书
Manual

镜头标识

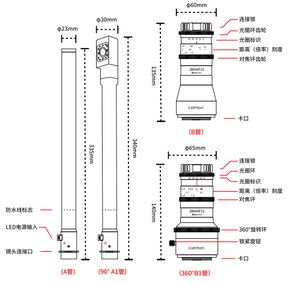

28mm F13 微距镜头

画　幅	全画幅
焦　距	28mm
光圈范围	F13-F40
光学结构	16组21片
视 场 角	75°
对焦范围	0.48m~∞
最大放大倍率	2倍
尺　寸	(A：φ23*L335)　(90°A1：φ30*L340) (B：φ60*L135)　(360°B1：φ65*L140)
重　量	(A：235g)　(90°A1：282g) (B：469g)　(360°B1：540g)
卡　口	索尼E/尼康Z/佳能RF/L 富士X/佳能EF/尼康F/PL
对焦方式	手动对焦
说明：因为卡口不同，长度和重量会有差别。	

镜头组装步骤

1.将A管对准B管嵌口位置嵌入,并卡入螺丝钉位置固定。



螺丝钉位置



(连接锁可能覆盖螺丝钉位置，如没有看到螺丝钉请转动连接锁寻找)

2.顺时针扭动连接锁至无法再扭动为止，锁紧A管和B管的连接处防止脱落。





组装完成

镜头更换步骤

1.将镜头卡口标识点对准机身卡口标识点，沿顺时针方向旋转，当听到"咯"声时表示镜头已安装到位。



(镜头卡口标识点)

2.如若需要从相机上取下镜头，按下机身镜头拆卸按钮，然后将镜头逆时针旋转即可取出。

注意事项

以下事项将有可能导致使用者受伤或使产品造成损坏。

1.拍照时切勿将镜头直对阳光否则可能会导致眼睛受伤。

2.切勿摆放至阴暗潮湿位置,避免镜头损坏。

3.如若镜头有脏污或有灰尘,可使用商用镜头清洁用品或合适镜头布擦拭。

4.请勿自行拆卸,如有故障请联系经销商进行处理。

产品保修卡

感谢您购买本产品,此卡为您的免费保修凭证

免费保修：壹年

保修说明：
保修卡适用您购买的本公司系列产品。
1、凡保修期内,由本产品自身引起的故障,请与本公司售后服务联系。
2、保修时我们将使用您的保修卡信息，请完整填写。
3、以下情况,属于有偿保修范围。
・人为因素造成的设备故障。
・因使用环境不符合本产品要求造成的故障。
・因不可抗力造成的产品损坏。
・无产品序号，保修卡，或产品序号及标贴模糊不清、破损、无法辨识。
・已过保修期。

产品名称：_____ 联 系 人：_____
经 销 商：_____ 电　　话：_____
订单编号：_____ 通讯地址：_____
购买日期：_____



博圳道（深圳）科技有限公司
销售邮箱/Email：support@astrhori.com
销售网址/Http：www.astrhori.com

LENS INSTRUCTION

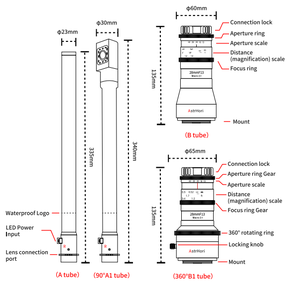

28mm F13 MACRO LENS

Frame size	Full Frame
Focal length	28mm
Aperture size	F13-F40
Optical structure	21 Elements in 16 Groups
Angle of view	75°
Focusing range	0.48m~∞
Max. magnification	2X
Size	(A：φ23*L335)　(90°A1 φ30*L340) (B：φ60*L135)　(360°B1 φ65*L140)
Weight	(A：235g)　(90°A1：282g) (B：469g)　(360°B1：540g)
Mount	E/Z/RF/L X/EF/F/PL
Focus mode	Manual
Note:Because of different mount,the length and weight will be different	

LENS ASSEMBLY STEPS

1. Align the A tube with the socket position of the B tube and insert it, and insert it into the screw position to fix it.



Screw position



(The connection lock may cover the screw position, if you do not see the screw, please turn the connection lock to find it)

2. Twist the connection lock clockwise until it can no longer be twisted, and lock the connection between the A tube and the B tube to prevent it from falling off.





Assembly is complete

HOW TO REPLACE THE LENS

1. Align the lens mount mark with the body mount mark, then rotate it clockwise, it means the lens has been installed in place when you hear a "click".



(Lens mount identification point)

2. If you need to remove the lens from the camera, press the lens release button on the body, then rotate the lens counterclockwise to remove it.

NOTICES

The following may cause injury to the user or damage to the product.
1. Don't point the camera at the sun or you may hurt your eyes.
2. Don't put it in a dark, damp position to avoid lens damage.
3. If the lens is dirty or dusty, use a commercial lens cleaner or suitable Lens cloth.
4. If there are any problems,please contact the dealer and do not disassemble by yourself.

PRODUCT WARRANTY CARD

Thank you for purchasing this product.
This card is your free warranty certificate

Warranty: Free Warranty: one year

Warranty card is applicable to all products you order from our company.
1. Any problems caused by the product itself, please contact our after-sales service within warranty period.
2. We will use your warranty card information, please complete.
3. Under these following situations, payment is needed for your warranty.
・Equipment failure due to human factors.
・Failure due to use in an environment that does not meet the requirements of this product.
・Product damage due to force majeure.
・No product serial number and warranty card, or product serial number and label blurred, damaged, illegible.
・Out of warranty period.

Product name: _____ Contact person: _____
Dealer: _____ Telephone: _____
Order number: _____ Address: _____
Date of purchase: _____

说明书:90mmX90mm 6折 正反面