
GABOR®

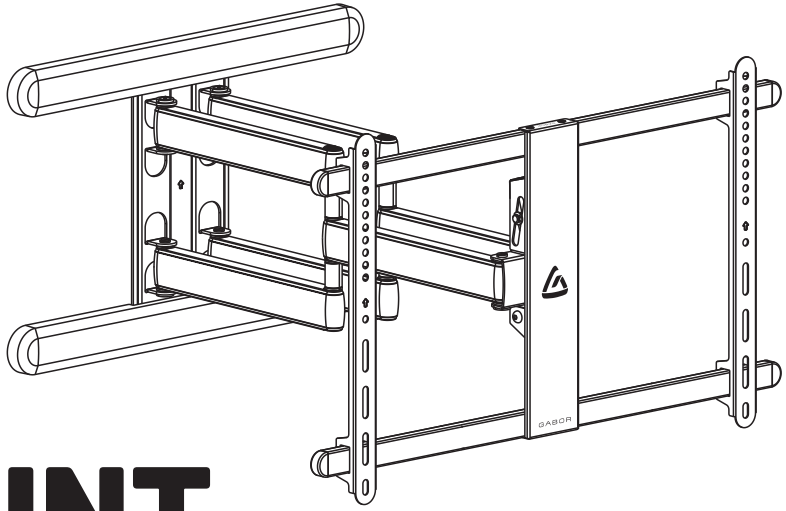

FSM-P / LUXE FULL SWING


WALL MOUNT

for 37 to 80 in. Displays

User Manual

Thank you for choosing Gabor.

The Gabor Luxe Full-Swing Wall Mount offers smooth and flexible viewing angles for wall-mounted displays. The sturdy steel construction accommodates large flat panel displays with screen sizes measuring 37 to 80 inches and supports a maximum weight of 154 pounds. An installation template makes setup a breeze and you can customize your viewing angle with tilt, swivel, and screen depth articulation.

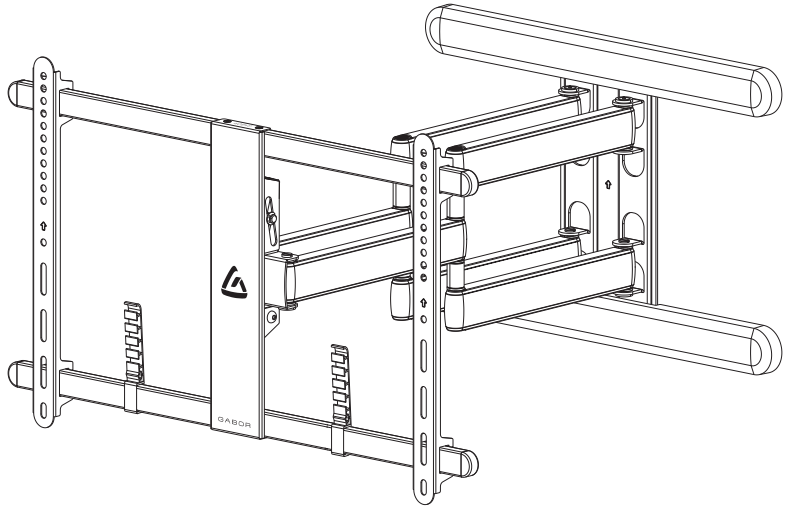

Safety Warnings

- When installing this product, be sure to refer to the mounting instructions detailed in this manual; failure to abide by the mounting instructions may void the product's warranty.
- Do not use this product for any flat panel display other than what it is intended for; the exact specification, size parameters, and weight limits are found both on the product box and in the instruction manual.
- It is strongly recommended that this product be installed by a qualified professional or installation contractor; Gabor takes no responsibility for any product damage or personal injury resulting from mishandling, incorrect mounting, faulty assembly, or improper use of this product.
- This product has been designed specifically for mounting directly on wooden studs or concrete walls; depending on wall type and material, the use of additional appropriate mounting hardware and/or accessories such as heavy-duty anchors may be required.
- The supplied mounting hardware is not intended for use on metal studs or cinder block walls and may not be appropriate for old or weak walls; it is best to consult with a qualified professional to determine whether your wall is capable of supporting this bracket.
- Do not mount the device on structures that may be affected by vibrations or noticeable impacts; do not install near a heater, fireplace, or any other source of direct heat energy.
- It is recommended that at least 2 people perform the installation process to prevent injury from mishandling or dropping the product and/or flat-screen device.
- This product may contain small parts which can possibly pose a choking hazard; keep out of reach of children and pets.
- Excessive exposure to liquids may damage the finish of this product; when cleaning this product, use only a mild detergent solution, and quickly wipe dry with a soft cloth.
- All images are for illustrative purposes only.

If you have safety concerns about installing this product, contact a qualified professional or installation contractor.

If this product is missing hardware or there are defective parts, visit www.madebygabor.com or call Customer Service at 212-594-2353.

Product Specifications

Recommended Screen Sizes
37 to 80 in. (94 to 203.2 cm)


Depth from Mounting Source
2.7 to 26 in. (6.9 to 66 cm)

VESA Mounting Patterns (mm)
200×200,
200×300,
200×400,
300×200,
300×300,
300×400,
400×200,
400×300,
400×400,
600×400




Max Weight Capacity
154 lb. (70 kg)

Material
Steel

Weight
24 lb. (10.9 kg)

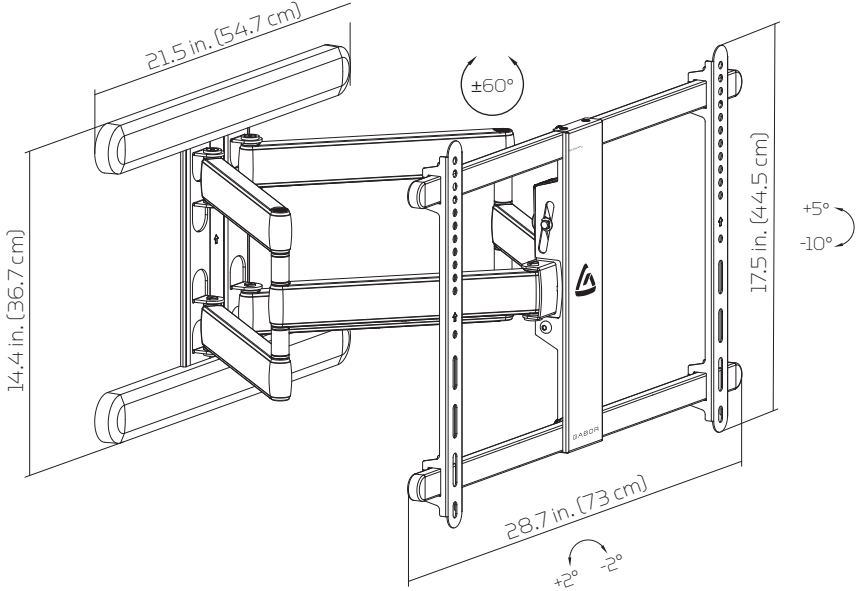

Overview

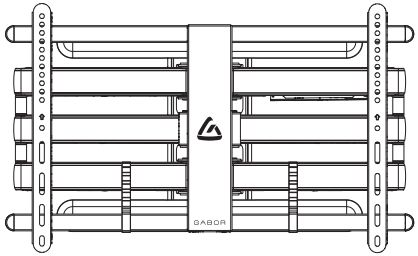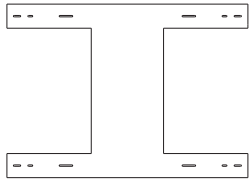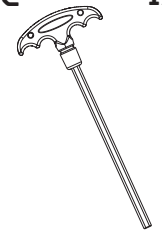
A 1x 	**B** 1x 	**C** 1x 

D 1x  Bubble level	**M-A** 4x  M6 × 14 mm screws	**M-B** 4x  M8 × 14 mm screws	**M-C** 4x  M6 × 30 mm screws
M-D 4x  M8 × 30 mm screws	**M-E** 4x  D8	**M-F** 4x  Small spacers	**M-G** 4x  Large spacers

Mounting Hardware

W-A 6x  ST8 × 90 mm screws	**W-B** 6x  Anchors	**W-C** 6x  D8

Required Tools



Display/TV Placement


Before installing the Gabor Full Swing Mount, you will need to determine the placement of your display and identify surrounding support structures for attachment.

The best height for a display is at the viewer's eye level.
You can find this height in one of two ways.

1. Measure the distance from the seating area to the viewing area. The ideal position is when the center of the display (where the diagonals meet) is as close as possible to eye level.


OR

2. Cut a piece of sturdy cardboard that's approximately the same size as your display. Use the cardboard to find a comfortable height and mark the mounting location with a pencil.

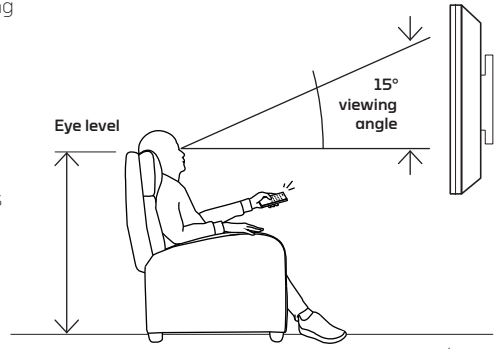


Before You Begin

Extend the mount and remove the covers.

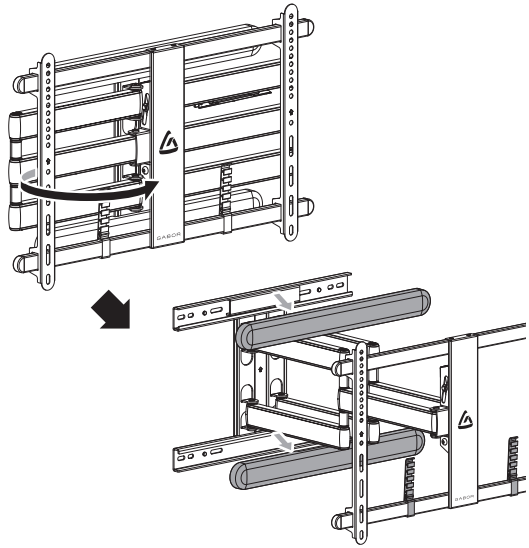


Attaching the Wall Bracket to Wooden Studs

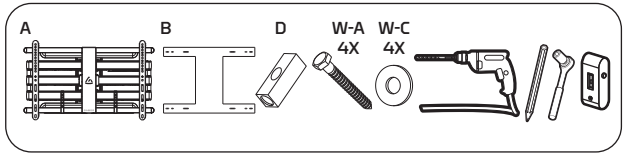


Wooden studs run vertically inside the wall, 16 inches apart, behind the drywall or plaster. The wall bracket must be mounted to a wooden stud or it could fall out and damage your display or cause personal harm.


1. Use a stud finder to locate the edges of the wooden studs and mark the center of each one.

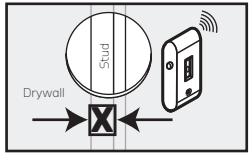


2. Place the wall bracket template up to the marked locations and tape it to the wall. Use the bubble level to make sure the template is level before drilling. Use a pencil to mark the four locations as shown.

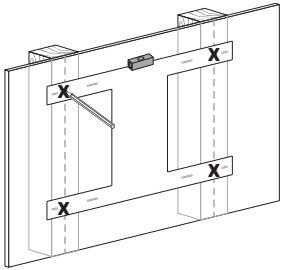


3. Use a 1/4-inch (6 mm) wood drill bit to predrill the four anchor locations as shown, 3.5 inches (90 mm) deep, and then clean out the debris from the holes.

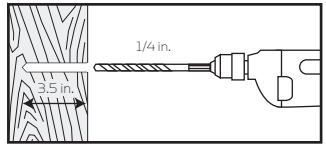

4. Remove the template and screw in the four wall screws and washers using a 1/2 in. or 13 mm socket wrench as shown. Use the bubble level to make sure the mount is level.

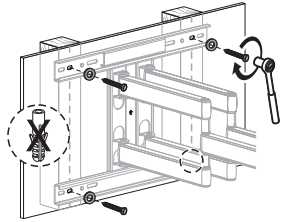


Attaching the Wall Bracket to Concrete

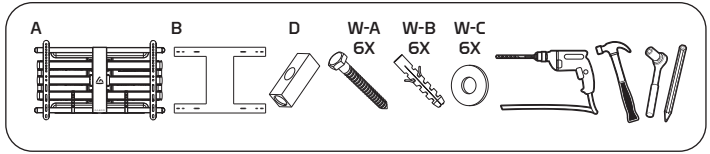


Warning! Make sure the concrete wall is solid and at least 8 inches (20 cm) thick. If the concrete exhibits cracks or other defects, this may result in failure of the concrete anchors and cause damage to your display or serious personal injury.


1. Place the wall bracket template up to the marked locations and tape it to the wall. Use the bubble level to make sure the template is level before drilling. Use a pencil to mark the six locations as shown and place a piece of tape over each mark.

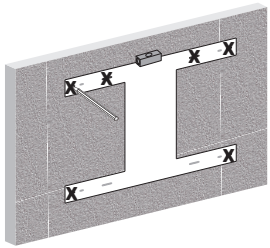


2. Use a 1/2-inch (12 mm) concrete drill bit to predrill the marked spots 3.7 inches (95 mm) deep and then clean out the debris from the holes.

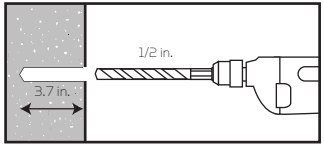


3. Remove the template and insert the concrete anchors into the predrilled holes. Use a hammer to lightly tap the anchors into the concrete.

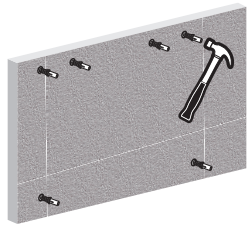

4. Screw in the six wall screws and washers into the previously tapped wall anchors using a 1/2 in. or 12 mm socket wrench as shown. Use the bubble level to make sure the mount is level.

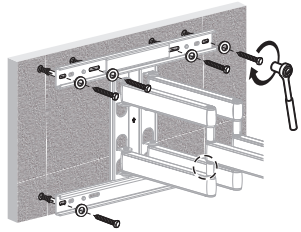


Attach the Covers

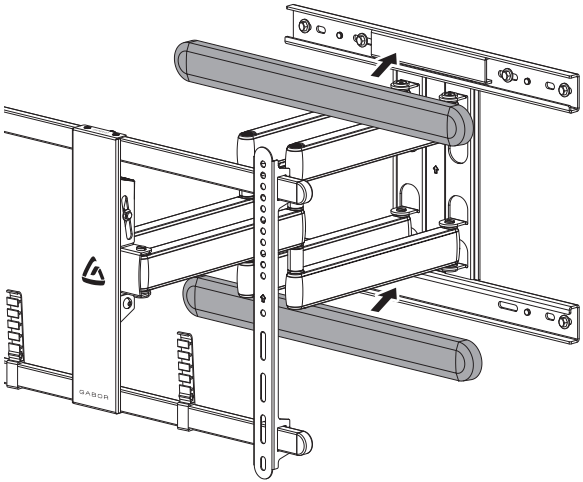


Remove the Display Bracket from the Wall Mount


Loosen the top locking knob about 5/32 in. (4 mm), then remove the bracket. Unscrew and remove the display bracket's bottom locking knob.

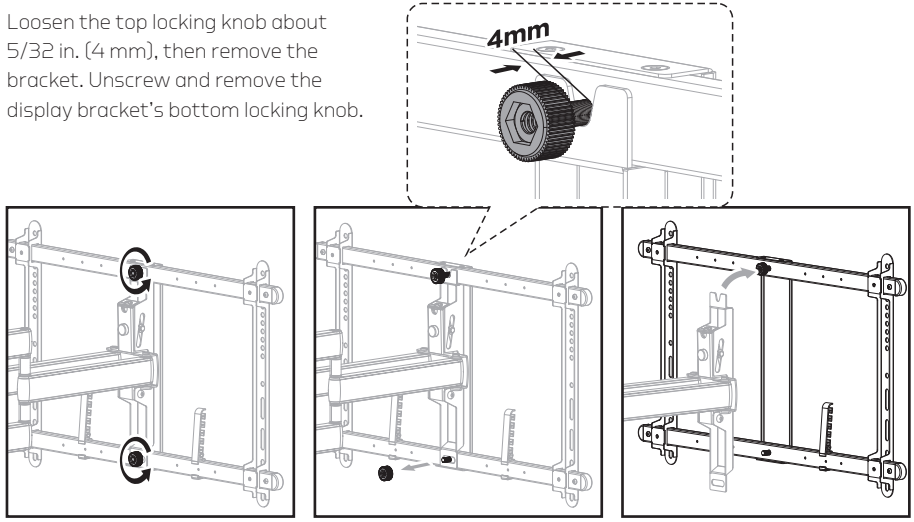



VESA Pattern

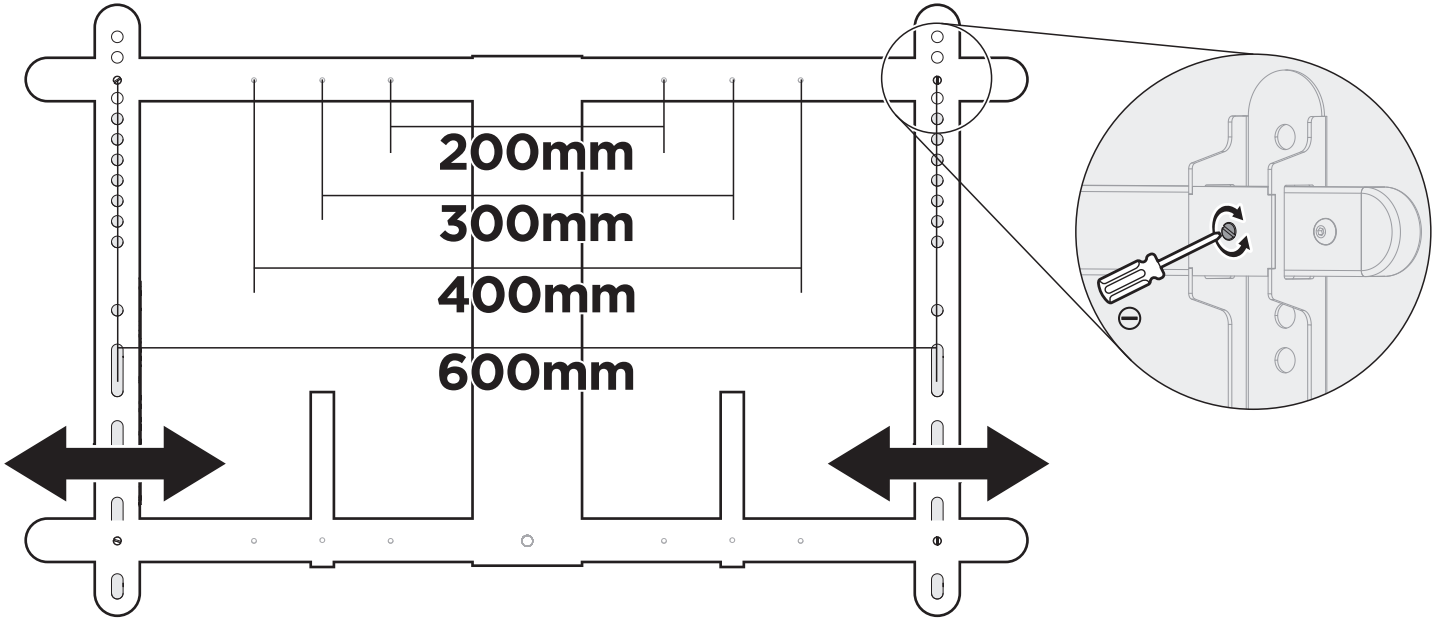

Attaching the Display Bracket

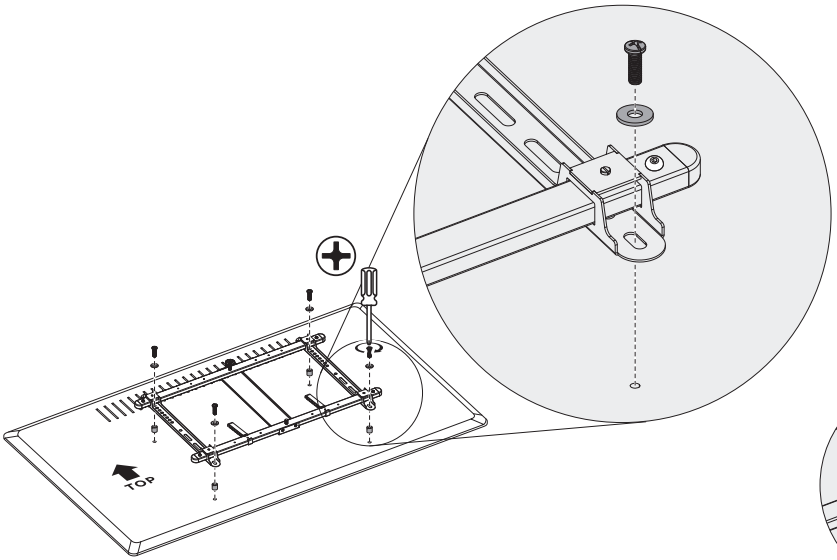


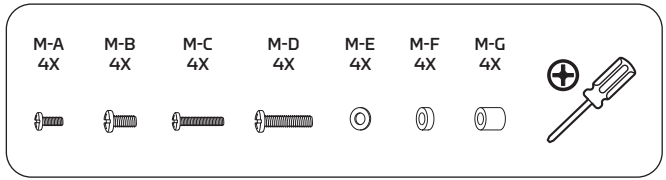

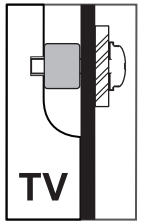


If Your Display Has Recessed Mounting or a Curved Back:
Install the spacers between the bracket and your display. You can combine spacers to best fit your display. Then fasten with the screws and washers until secure.


If the screw is too short, it may not hold the display. If it's too long, it may damage the display.

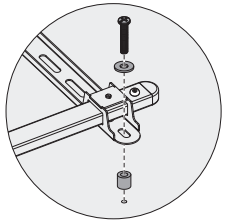

OR

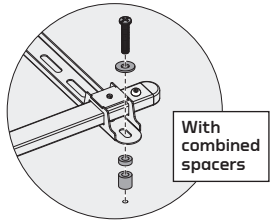

With combined spacers

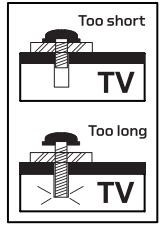


Mounting the Display on the Wall Bracket

Important! We recommend that two to three people perform this step.




1. Lift your display up to the wall mount and align the display bracket's screws with the mount's top notch and bottom slot.

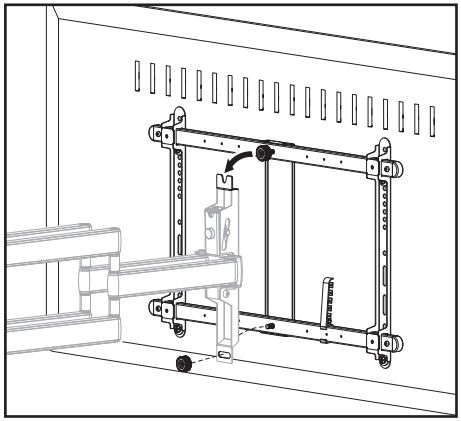


2. Screw on the locking knobs until secure.


Important! Make sure the nut is secure inside the locking knob and the hexagonal opening is pointed away from the display.

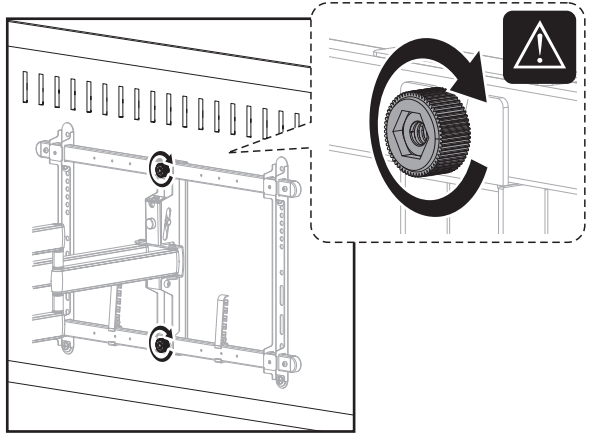


Post-Installation Adjustment

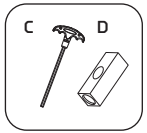


Once your display is attached onto the wall mount, you can fine-tune adjustments to the horizontal level +2° to -2°, tilt +5° to -10°, swivel +60° to -60°, and depth from the wall 2.7 to 26 inches.

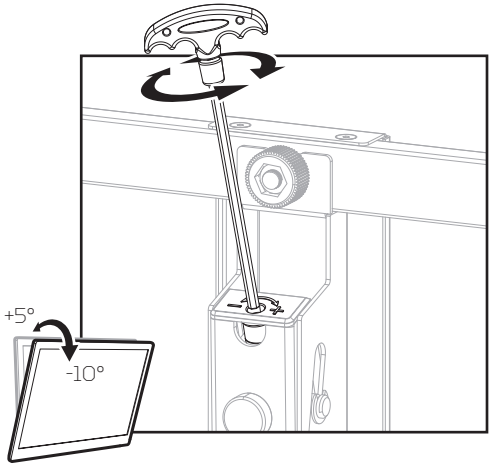

Tilt

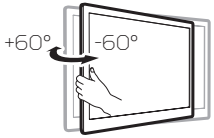


Swivel

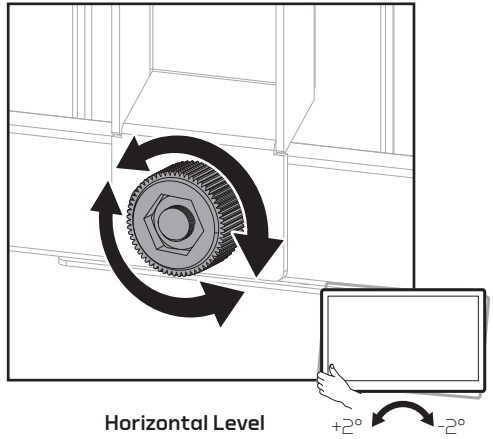


Horizontal Level

Cable Management

Run the power and A/V cables through cable hooks and concealment covers attached to the bottom of the extension arms. Widen the cover openings to slide the cables into the covers and pull the cables through.

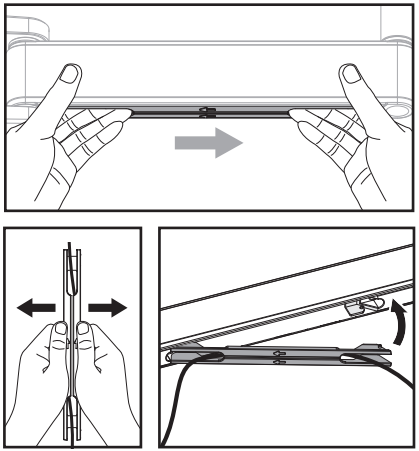

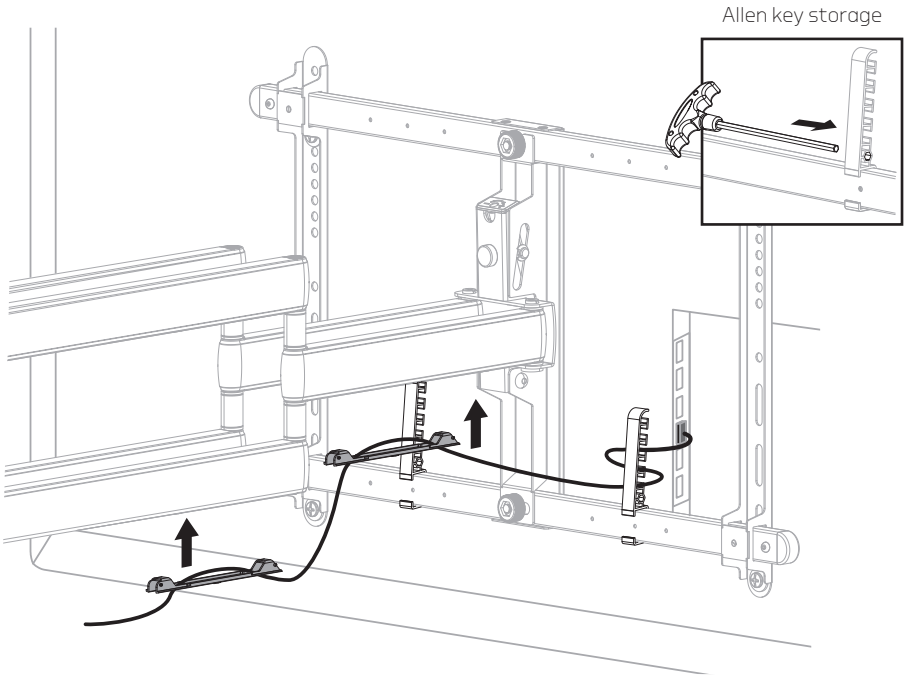

One-Year Limited Warranty

This Gabor product is warranted to the original purchaser to be free from defects in materials and workmanship under normal consumer use for a period of one (1) year from the original purchase date or thirty (30) days after replacement, whichever occurs later. The warranty provider's responsibility with respect to this limited warranty shall be limited solely to repair or replacement, at the provider's discretion, of any product that fails during normal use of this product in its intended manner and in its intended environment. The inoperability of the product or part(s) shall be determined by the warranty provider. If the product has been discontinued, the warranty provider reserves the right to replace it with a model of equivalent quality and function.

This warranty does not cover damage or defect caused by misuse, neglect, accident, alteration, abuse, improper installation or maintenance. EXCEPT AS PROVIDED HEREIN, THE WARRANTY PROVIDER MAKES NEITHER ANY EXPRESS WARRANTIES NOR ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. This warranty provides you with specific legal rights, and you may also have additional rights that vary from state to state.

To obtain warranty coverage, contact the Gabor Customer Service Department to obtain a return merchandise authorization ("RMA") number, and return the defective product to Gabor along with the RMA number and proof of purchase. Shipment of the defective product is at the purchaser's own risk and expense.

For more information or to arrange service, visit www.madebygabor.com or call Customer Service at 212-594-2353.

Product warranty provided by the Gradus Group.

www.gradusgroup.com

Gabor is a registered trademark of the Gradus Group. © 2024 Gradus Group LLC. All Rights Reserved.

GABOR®
A Gradus Group Brand

GG2


GABOR®