DYNAMITE 8GB

User Manual

Thanks for your using our digital music player!
In order to let you familiar with the product operation as soon as possible, we offer the user manual in details. You can get instructions, operations, system settings and application notice for the product. Please read this manual carefully before using this product. It will help you to operate the product freely.

Declaration

1. There may be some errors or omissions in the manual. Please in kind prevail.
2. In order to meet market demands, we will revise and improve the product without notice.
3. In any case, we are not responsible for the losses caused by data damage which stored in the machine.


Precautions

The following content is set to ensure proper usage and good performance of the player. Please read carefully and comply with it.

- Do not impact the player seriously
- Do not expose the player to benzene or thinner chemicals.
- Do not place the player near a strong magnetic field or electric field.
- Do not put the player into water or near high temperatures.
- Do not disassemble, repair, and manufacture the player.
- While in motion state, such as riding a bike, driving a car or motorcycle, please do not use the player and headset, so as to avoid danger
- Do not listen at high volume to avoid bad effect on hearing

Basic Function

- Play Music: Support MP3 etc.
- Voice Recording: MP3, WMA, ACT recording format.
- E-book reading: TXT format
- Support USB2.0 high-speed transmission, fully compatible with USB1.1.

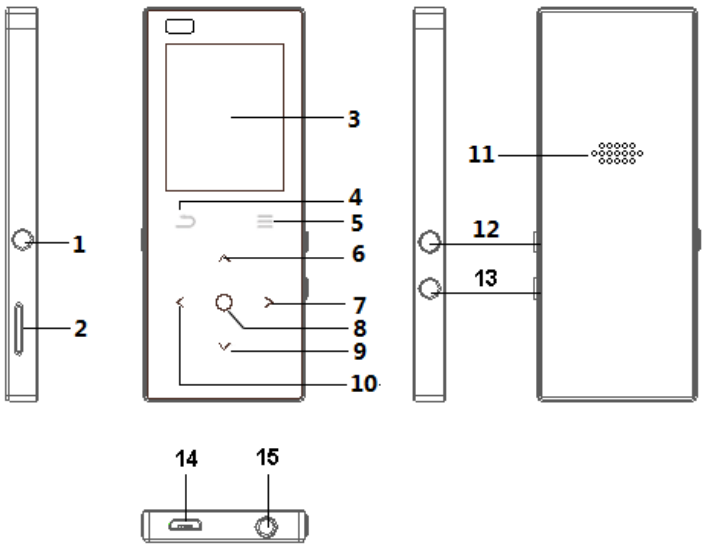

Button Function

1. Power on/off button **2.** TF card slot
3.Screen **4.**Back **5.**Menu **6.**Up

7.Next/Fast forward button

8.Play/Pause/Confirm **9.**Down

10. Previous/Fast backward button

11. Speaker hole **12.**Volume up

13. Volume down **14.**USB port

15. Earphonejack/Recording hole

Charge the Player

Use 3.7V/280mAh charger for charging.

Plug one end of the micro USB cable into the USB port of a computer, the other end to the port on your device. While it is fully charged, disconnect the cable from your device by pulling it straight outward.

Note: when you start charging, it will show two options: “Charge & Transfer” and “Charge & Play”. An icon in the top right corner will show the charging status.

Power On/Off: Hold power button for 3 seconds

Note*:* The player will power off automatically if inactive and no applications operate on backstage for 1 min. And it will work on backstage with screensaver if no applications operate for 30 seconds. You can press power on/off button to light up the screen while it working on backstage.

Main interface

Each time you press “Next/Previous” button, it will bring you to one of its 7 different interfaces, including **All songs**, **Artists**, **Albums**, **Play lists**, **Bluetooth**, **Folder view**, and **Tools**.

While it’s on the main interface, press “Play button” to enter, and then press “Menu button” to access to the submenu.

1. E-book

Support txt format E-book file.

While reading e-book, press “Menu button” to enter the submenu: Play setting(Auto scroll time), Delete ebook, Bookmark Select, Delete bookmark, Add book mark, Page select.

2. Recordings

4 options:Start voice recording, Recordings library, Record format, Record settings.

Record format: MP3/WAV/ACT Rec

3. Set

12 System settings: Play mode, Sound settings, Sleep timer, Idle shutdown, Button lights, Display settings, Date and time, Language, Information, Format device, Factory settings, Create playlist.

Bluetooth Connect

Press “Confirm button” > “Bluetooth status” > “Enable Bluetooth”/ “Disable Bluetooth”,

Choose “Enable Bluetooth” > Bluetooth Search, which one you want to connect for option.

Submenu

While it’s on music playing interface, press the “Menu button” to access to the submenu.

Then a related list will show, including “Home”, “Play mode”, “Sound settings”, “Add to playlist”, “Remove from Playlist”, “Sleep timer”, “Delete” and “Bookmarks”.

1. Play mode

While playing, Press “Menu button” > “Play mode” > “Play music from...”/ “Repeat”/ “Shuffle”/ “Repeat settings”. Select according to your need.

Under menu “Repeat settings”, you can set “Repeat Mode”(**A-B repeat**), “Repeat time” and “Repeat interval”.

2. Sound settings

While playing, Press “Menu button” > “Sound settings” >”Equalizer”/ “Variable Speed Playing”/ “Volume limit”.

Equalizer, you can choose different music style, such as “Rock”, “Funk”, ”Hip hop”, “Jazz”, “Classical”, “Techno”, “Custom”.

Forward /Backward /VOL

While it’s on music playing interface

Hold the “Fast forward button” to fast forward, short press to next music file; hold the “Fast backward button” to rewind, short press to the previous song files. Tap

the “Play” button for play/pause.
Press “Volume +” to turn up the voice,and “Volume -” to turn down the voice.

Connect to PC

1. Connect: Connect it to computer by USB cable,it is successfully connected if you find this icon appears in the taskbar of computer.
2. Disconnect: Click on the icon → click “Remove USB flash Disk”.

Treatment of common problems

● The machine cannot boot

Please check whether the battery is exhausted. Try again after charging.

● Cannot hear the sound though earphone/ headset

①Please check whether the volume is set to zero.
②Please check whether the headset is properly inserted into the headphone jack.

● Serious noise

①Please check whether the headset plug is clean. Dirt can cause noise.
②Please check whether the music file is damaged. If the music file is damaged, it may cause serious noise or skips. Try to play other music files.

● Screen shows garbled characters

Please check whether the language is suitable.

● Cannot download files

Please make sure the player and computer is connected properly.
Please check whether the internal memory space is full.
Please check whether the USB cable is damaged.

Display screen	OLED 128*160
Recording formats	MP3: 32kbps, 64kbps, 128kbps
	WAV: 512kbps-1536kbps(PCM format)
Music formats	MP3/WMA/OGG/APE/FLAC/WAV/AAC-LC/ACELP
Size	95mm*38mm*9mm
S/N	91DB
Distortion	0.05%
USB interface	USB2.0 High speed
Capacity	8GB, support up to 32GB TF card(not included in the package)
Case	Zinc alloy
Charge time	1.5 hours
Battery capacity	3.7V/280mAh
Recording distance	10-15 meters
OS	Windows98 and above