FoxFury LIGHTING SOLUTIONS

RUGO™ 2


QUICK START GUIDE

WARNINGS


- When used for extended periods of time the Rugo™ will become HOT to the touch.
- Do not stare into the LEDs for long periods of time or from a close range (less than 2ft).
- This product is designed as an auxiliary lighting tool to be used with photo, video, and film.
- DO NOT use the Rugo™ 2 as a primary light source for activities.
- While using any FoxFury product, please operate at safe speeds.
- Be sure to rinse the Rugo™ 2 with fresh water immediately after use in the ocean or a pool.
- It is the responsibility of drone/UAV users to follow the FAA laws and regulations and/or the laws and regulations applicable to flight location.

IMPORTANT!
Please fully charge the Quick Swap™ Power Pack before using the Rugo™ 2 for the first time.

MOUNTS INCLUDED

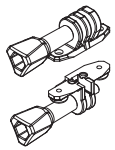

STANDARD MOUNT WITH (2) KNOBS

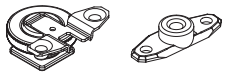


¼"–20 AND COLD-SHOE MOUNT




THUMBSCREWS (2)


FULL ASSEMBLY

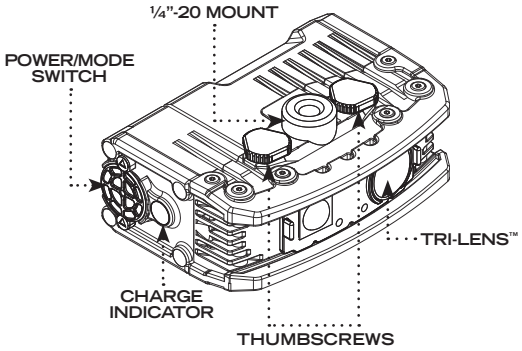

DISASSEMBLED LIGHT HEAD

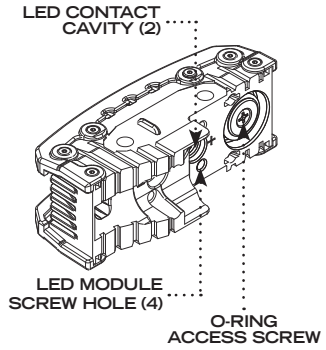


DISASSEMBLED POWER PACK

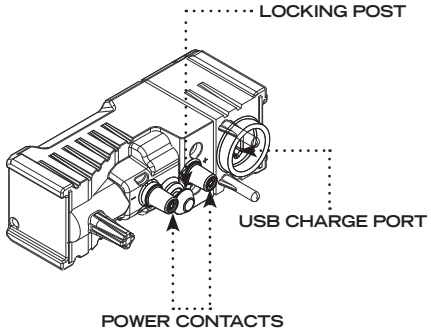

CHARGING THE POWER PACK


1

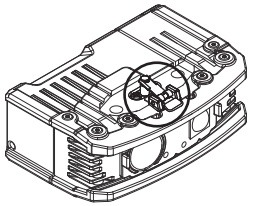

Press and hold the Power Pack Release Lever located on the Light Head portion of the Rugo™ 2.


(Rugo™ in steps 1–3 shown with no mounts and is flipped to show Power Pack Release Lever)

2

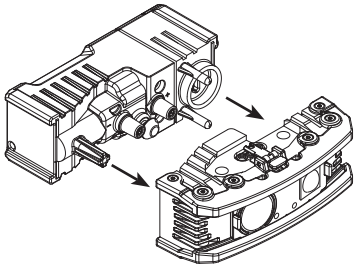

While maintaining pressure on the Power Pack Release Lever, pull the Light Head and Power Pack apart. If unable to pull apart easily, try moving the Power Pack back and forth while continuing to pull.

3

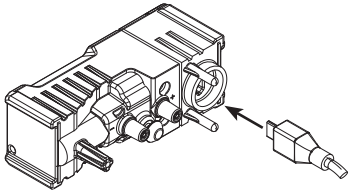

Insert the provided Micro USB Cable into the Power Pack. Then, insert the opposite end USB (Type A) into a USB compatible power source or into the included AC/DC Adaptor.

OPERATIONAL MODES

- ON/LOW mode: Press the Power/ Mode Switch once.
- MEDIUM mode: From LOW mode, press the Power/Mode Switch once.
- HIGH mode: From MEDIUM mode, press the Power/Mode Switch once.
- STROBE mode: From HIGH mode, press and hold the Power/Mode Switch once.
- OFF: From ANY mode, press and hold the Power/Mode Switch for 2 sec.

POWER PACK LIFE

MODE	DURATION	LUMENS
HIGH	1 hour	620
MEDIUM	1.5 hours	380
LOW	6.75 hours	70
STROBE	2.5 hours	620

*Power Pack life may vary according to age and ambient conditions.


- The Charge Indicator will turn green once fully charged.
- Charging time is about 2.5 hours.
- Do NOT leave Power Pack charging for extended periods of time.
- When disassembled, keep both ends dry and away from water.

FOR MORE INFO VISIT
FOXFURY.COM/RUGO

3/2019


USING THE TRI-LENS™

FLOOD

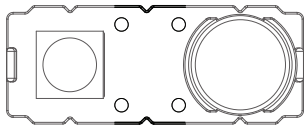


120°
BEAM DISTANCE: 10 ft (3 m)
USED FOR: Close-up

AREA

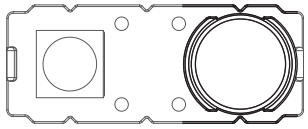

55°
BEAM DISTANCE: 30 ft (10 m)
USED FOR: Mid-range


SPOT

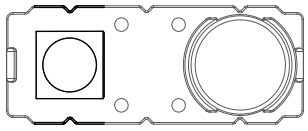

25°
BEAM DISTANCE: 100 ft (30 m)
USED FOR: Distance


REMOVING/CHANGING THE STANDARD MOUNT

1

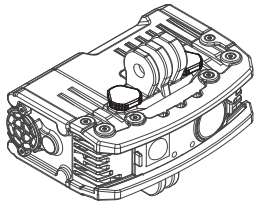


Start with the Rugo™ 2 positioned so that the Thumbscrews are on top.

2

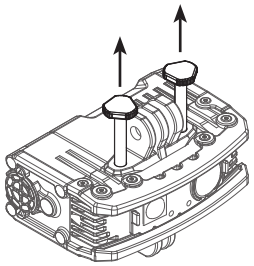


Twist each Thumbscrew counter-clockwise until they become loose. They should then be ready to pull out completely.

3

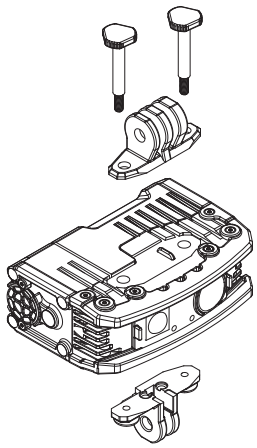


REMOVING/CHANGING THE ¼”-20 & COLD-SHOE MOUNT

1

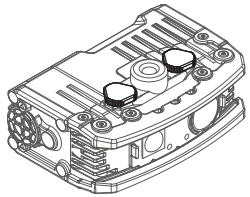


Start with the Rugo™ 2 positioned so that the Thumbscrews are on top.

2

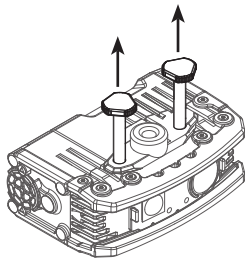


Twist each Thumbscrew counter-clockwise until they become loose. They should then be ready to pull out completely.


3

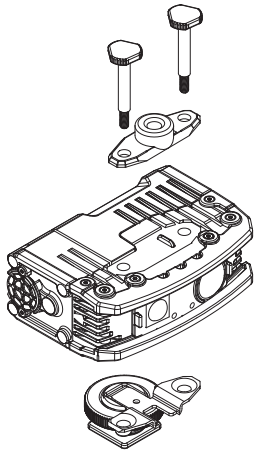


MOUNTING TO DEVICES

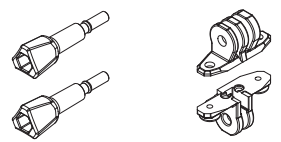


NOTE: Orientation of Mount Knobs should match as shown above.

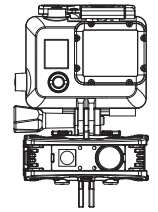

ACTION CAM
The Rugo™ 2 can be mounted to an Action Cam via the removable Standard Mount. Line up the mounts on the Rugo™ 2 with the mounts on the Action Cam and then tighten the Mount Knobs.

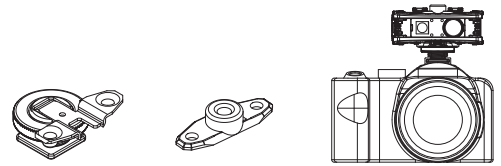

CAMERA
The Rugo™ 2 can be mounted to a DSLR camera via the removable Cold-shoe Mount. Simply slide the mount onto the camera flash attachment and twist the Locking Ring until securely fastened.

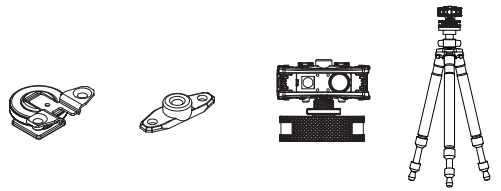

TRIPOD OR PUCK ADAPTOR
The Rugo™ can be mounted to most tripods or to the Puck Adaptor (purchased separately) via the ¼"-20 Mount. Twist the threaded hole of the Rugo™ ¼"-20 Mount onto the screw of the tripod or Puck. Then, twist the Rugo™ and Puck until it is securely fastened.