



UNIVERSAL BACKGROUND STAND


Assembly & Usage Instructions



CONTENTS


- (3) Stand uprights
- (8) Crossbar sections
- (1) Crossbar pivoting center bracket
- (2) Crossbar male-male adapter
- (3) Reversible 1/4"-20 - 3/8" studs
- (1) Carry bag

1) SETTING UP

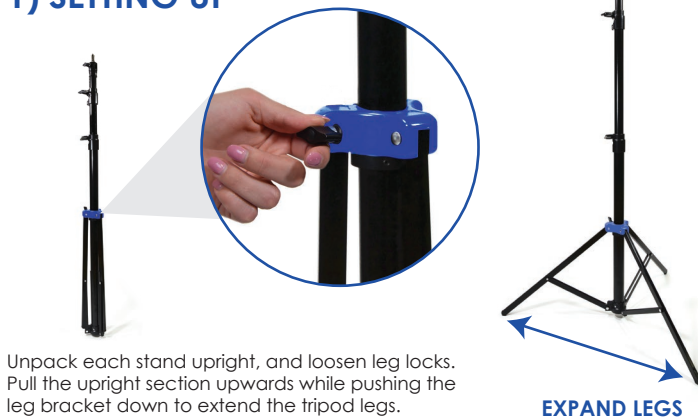

Unpack each stand upright, and loosen leg locks. Pull the upright section upwards while pushing the leg bracket down to extend the tripod legs.

2) POSITIONING UPRIGHT STANDS

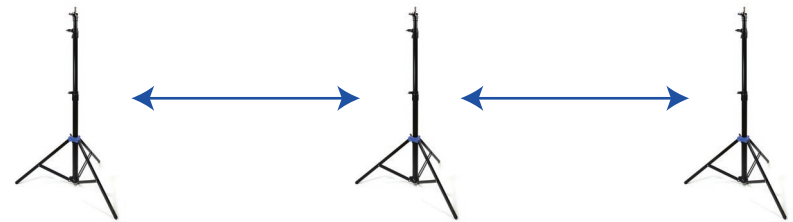

Place stands proper distance apart in desired configuration (straight or corner usage). Refer to Step 3 for crossbar configuration.

3) ASSEMBLING CROSSBARS

Assemble crossbar sections for each side of the stand as depicted below. Store unused sections in carry bag.


FOR 6' WIDE APPLICATIONS



FOR 9' WIDE APPLICATIONS




FOR 12' WIDE APPLICATIONS

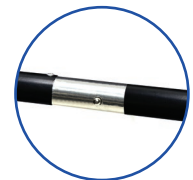


Push crossbar sections together until the silver pin snaps into hole.

4) ATTACH CROSSBARS TO UPRIGHTS

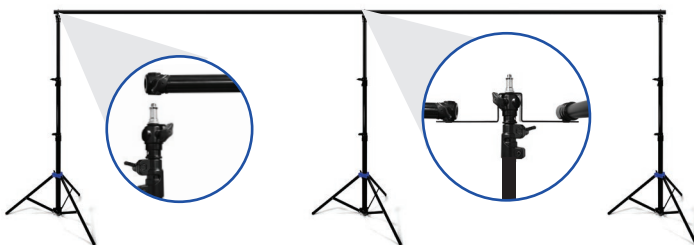

Unscrew the wingnuts on the sides of the end crossbar sections. Place the assembled crossbar over the reversible 1/4"-20 / 3/8" studs on top of the two outer uprights. If using a full width configuration, place pivoting connector bracket on top of middle upright and attach crossbars to each reversible stud.

5) HANG BACKDROP AND RAISE UPRIGHTS

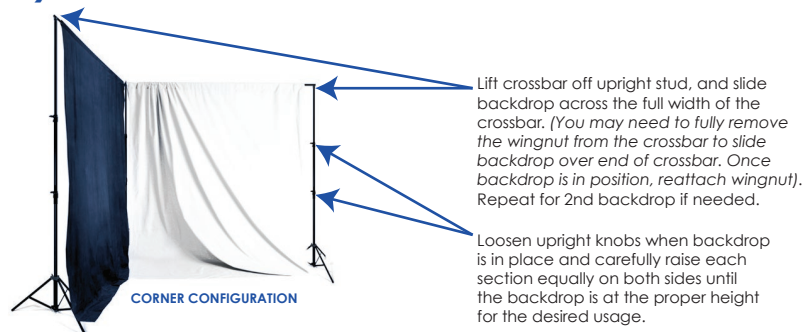

If using a backdrop with rod pockets or inner core, lift one end of the crossbar off of the top stud and carefully slide your backdrop onto the crossbar. If using a backdrop without a rod pocket or inner core, use clamps to attach the material to the crossbar at several even points along the crossbar. Tighten wingnuts on each end before use. Repeat for both backdrops. If using corner configuration, carefully move & place uprights in corner.