DVDO-CB-6-B Mounting Instructions

1. Remove the original bottom bracket of the camera and unscrew the mounting screws to detach it.





2. TV Bracket Assembly (5 Parts: A, B, C, D, E)



3. Stack Tray C on top of Tray A to assemble the TV bracket tray.

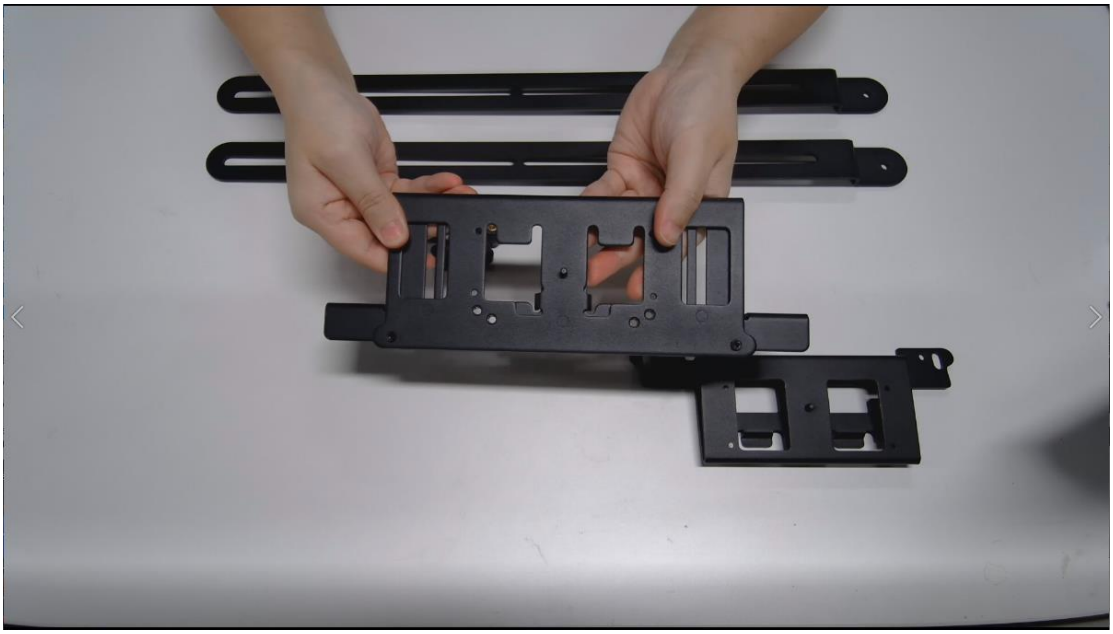

4. Secure Trays A and C together using Screw E.



5. Attach the TV bracket support rod D to the tray and secure it with screws.

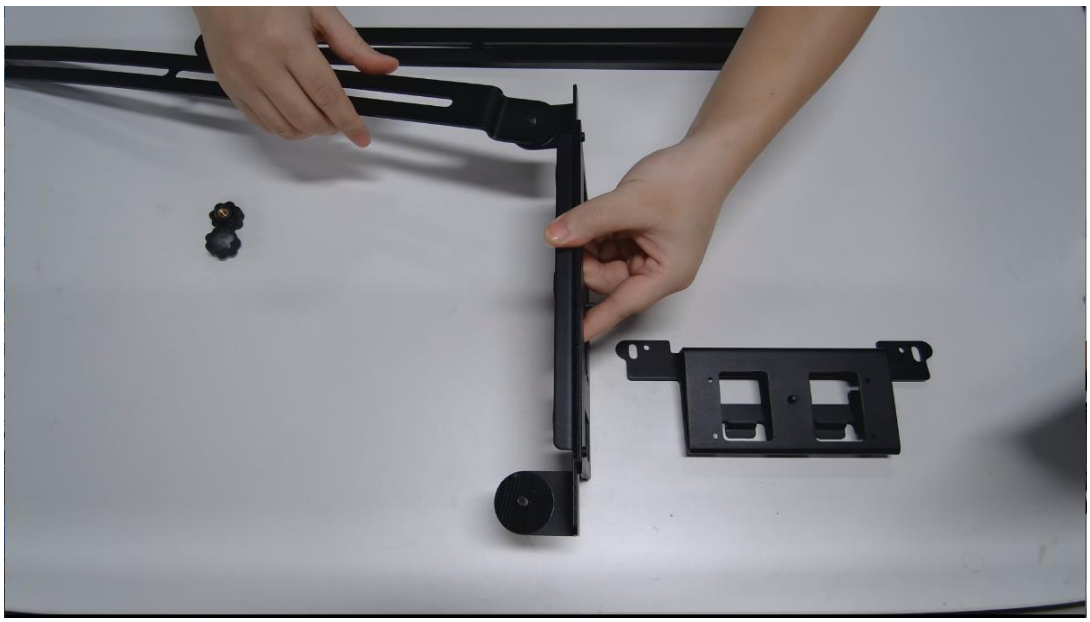



6. Secure the TV bracket to the television.



7. Attach bracket B to the bottom of the DVDO-CB-6-B, ensuring the tray's tabs (ears) are facing toward the rear of the camera.



8. Attach the device assembled in Step 4 onto the TV bracket tray, ensuring the mounting holes are properly aligned.



9. Secure the DVDO-CB-6-B bottom tray B to tray C using screws.



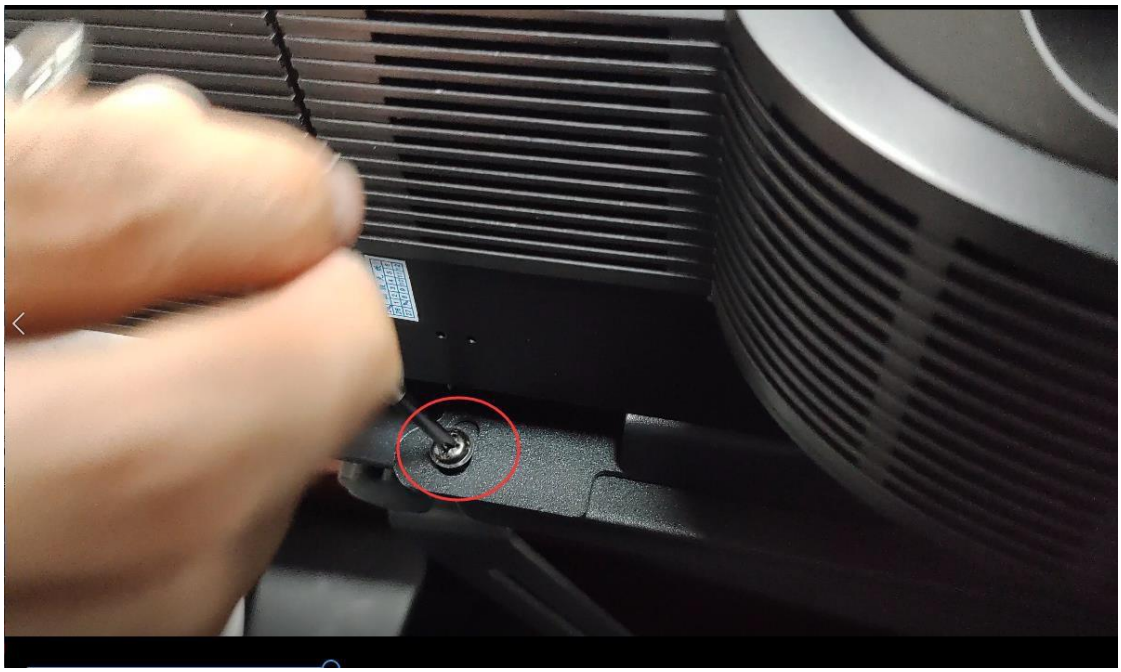

Installation Complete

